



# LCD MONITOR

SyncMaster 211MP


SyncMaster 241MP

## Owner's Instructions


Before operating the unit,  
please read this manual thoroughly,  
and retain it for future reference.

ON-SCREEN MENUS  
PC DISPLAY  
PICTURE IN PICTURE (PIP)  
PICTURE BY PICTURE (PBP)  
TELETEXT

## Caution

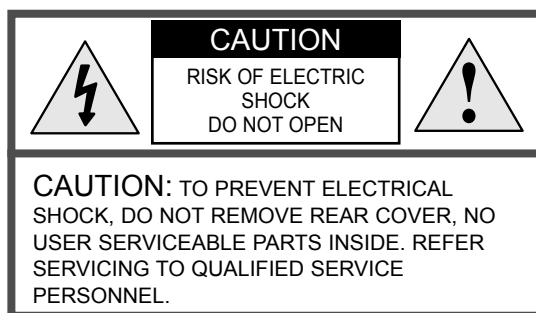

 
The lightning flash and arrow head within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.



**WARNING:** TO PREVENT DAMAGE WHICH MAY RESULT IN FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 **The main voltage is indicated on the rear of your set and the frequency is 50 or 60 Hz.**

**Information in this document is subject to change without notice.  
© 2003 Samsung Electronics Co., Ltd. All rights reserved.**

Reproduction in any manner whatsoever without the written permission of Samsung Electronics Co., Ltd. is strictly forbidden.

Samsung Electronics Co., Ltd. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

The **Samsung logo** is the registered trademarks of Samsung Electronics Co., Ltd.; **Microsoft**, **Windows®** and **Windows® NT** are registered trademark of Microsoft Corporation; **VESA**, **DPMS** and **DDC** are registered trademarks of Video Electronics Standard Association. All other product names mentioned herein may be the trademarks or registered trademarks of their respective owners.

### Plug and Play

The adoption of the new **VESA®** Plug and Play solution eliminates complicated and time consuming setup. It allows you to install your set in a Plug and Play compatible system without the usual hassles and confusion. Your computer system can easily identify and configure itself for use with your set.

Your set automatically tells the computer system its **Extended Display Identification Data (EDID)** using **Display Data Channel (DDC)** protocols so the computer system can automatically configure itself to use your set. If your PC system needs a monitor driver, install monitor driver contained on the accompanied CD according to the operating system your computer uses. For more information, refer to the driver installation instructions included with your CD package.

### PowerSaver

This set is **EPA ENERGY STAR®** compliant and **NUTEK** compliant when used with a computer equipped with **VESA DPMS** functionality. For energy conservation, turn your set Off when you are not using it or when leaving it unattended for long periods.


### EUROPEAN NOTICE

Products with the CE Marking comply with the EMC Directive (89/336/EEC), (92/31/EEC), (93/68/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European Norms:

- EN55022:1998+A1:2000 – Radio Frequency Interference
- EN55024:1998 – Electromagnetic Immunity
- EN55013:1990+A12:1994+A13:1996+A14:1999 – Radio Frequency Interference
- EN55020:1994+A11:1996+A12/A13/A14:1999 – Electromagnetic Immunity
- EN61000-3-2:1995+A1/A2:1998 – Power Line Harmonics
- EN61000-3-3:1995 – Voltage Fluctuations
- EN60065:1997 or EN60095:1998 – Product Safety.



## Safety Instructions

*These illustrations represent precautions concerning your TV.*

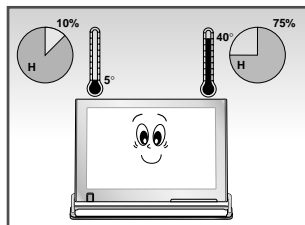



◀ Do NOT expose the TV to extreme temperature conditions or to extreme humidity conditions.

Do NOT expose the TV to direct sunlight. ▶

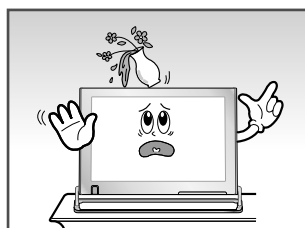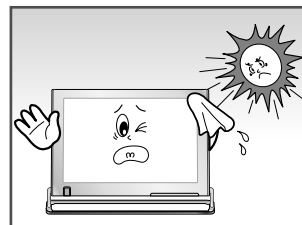



◀ Do NOT expose the TV to any liquids.

If the TV is broken, do not try to repair it yourself. Contact qualified service personnel. ▶

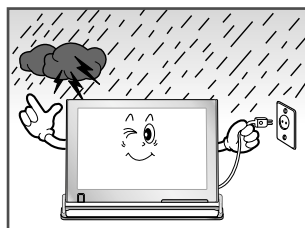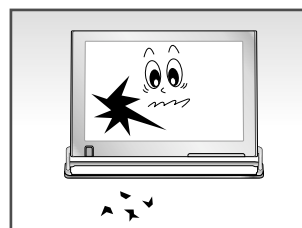



◀ During a storm conditions (especially when there is lightning) unplug the TV from the mains socket and aerial.

Keep all power adaptors apart. Possible fire hazard. ▶

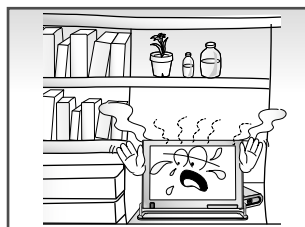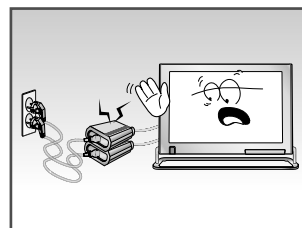


◀ Always keep the power adaptor in a well-ventilated area.

Remove and discard the plastic cover from the power adaptor before use. Possible fire hazard. ▶

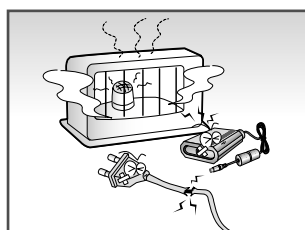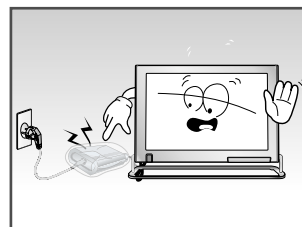

◀ Keep the power adaptor away from any other heater. Possible fire hazard.

If the remote control is not used for a long period of time, remove the batteries and store it in a cool, dry place. ▶

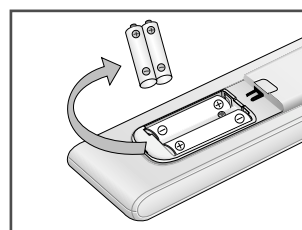

THIS DEVICE IS NOT FOR USE IN INDUSTRIAL ENVIRONMENTS

# Contents

◆ FOREWORD	
■ Caution .....	2
■ Safety Instructions .....	3
◆ CONNECTING AND PREPARING YOUR TV/Monitor	
■ Viewing the Control Panel.....	6
■ Installing on the Wall .....	7
■ Viewing the Connection Panel .....	8
– Connecting an Aerial or Cable Television Network.....	9
– Connecting Computer.....	9
– Connecting DTV Set-Top Box, VCR, or DVD.....	10
– Connecting External A/V Devices .....	10
– Connecting External Speakers .....	10
– Connecting Speakers.....	10
■ Viewing Pictures From External Sources .....	11
■ Viewing the Remote Control (All Functions Except Teletext).....	12
■ Viewing the Remote Control (Teletext Functions) .....	13
■ Inserting the Batteries in the Remote Control.....	14
■ Switching On and Off .....	14
■ Becoming Familiar with the Remote Control .....	15
■ Choosing Your Language .....	16
◆ SETTING THE CHANNELS	
■ Storing Channels Automatically.....	17
■ Storing Channels Manually.....	18
■ Giving Channels Names.....	19
■ Skipping Unwanted Channels .....	20
■ Fine Tuning Channel Reception.....	20
■ Sorting the Stored Channels .....	21
◆ USING THE VARIOUS FUNCTIONS	
■ Changing the Picture Standard .....	22
■ Adjusting the Picture Settings .....	22
■ Selecting the Picture Format.....	23
■ Freezing the Current Picture.....	23
■ Changing the Sound Standard .....	24
■ Adjusting the Sound Settings .....	24
■ Enjoying the Dolby Sound.....	25



# Contents

◆ USING THE VARIOUS FUNCTIONS	
■ Switching the Internal Speakers On/Off.....	25
■ Choosing the MTS (Multichannel Television Stereo) .....	26
■ Viewing the Picture In Picture (PIP) .....	27
■ Viewing the Picture By Picture (PBP; Double Screen).....	28
■ Switching Off Automatically.....	29
■ Displaying Information .....	29
◆ USING THE PC FUNCTIONS	
■ Adjusting the Brightness and Contrast .....	30
■ Selecting the Image Size.....	30
■ Adjusting the Image Quality.....	31
■ Changing the Image Position .....	31
■ Adjusting the Color .....	32
■ Initializing the Image Settings.....	32
■ Display Modes .....	33
■ PowerSaver .....	33
◆ USING THE TELETEXT FEATURE	
■ Teletext Feature .....	34
■ Displaying the Teletext Information .....	34
■ Selecting a Page by Number .....	35
■ Using FLOF to Select a Page .....	36
■ Storing Teletext Pages .....	36
◆ RECOMMENDATIONS FOR USE	
■ Troubleshooting: Before Contacting Service Personnel .....	37
■ Technical and Environmental Specifications.....	38
■ Wiring the Mains Power Supply Plug (UK Only) .....	39

## Symbols



Press






Important



Note
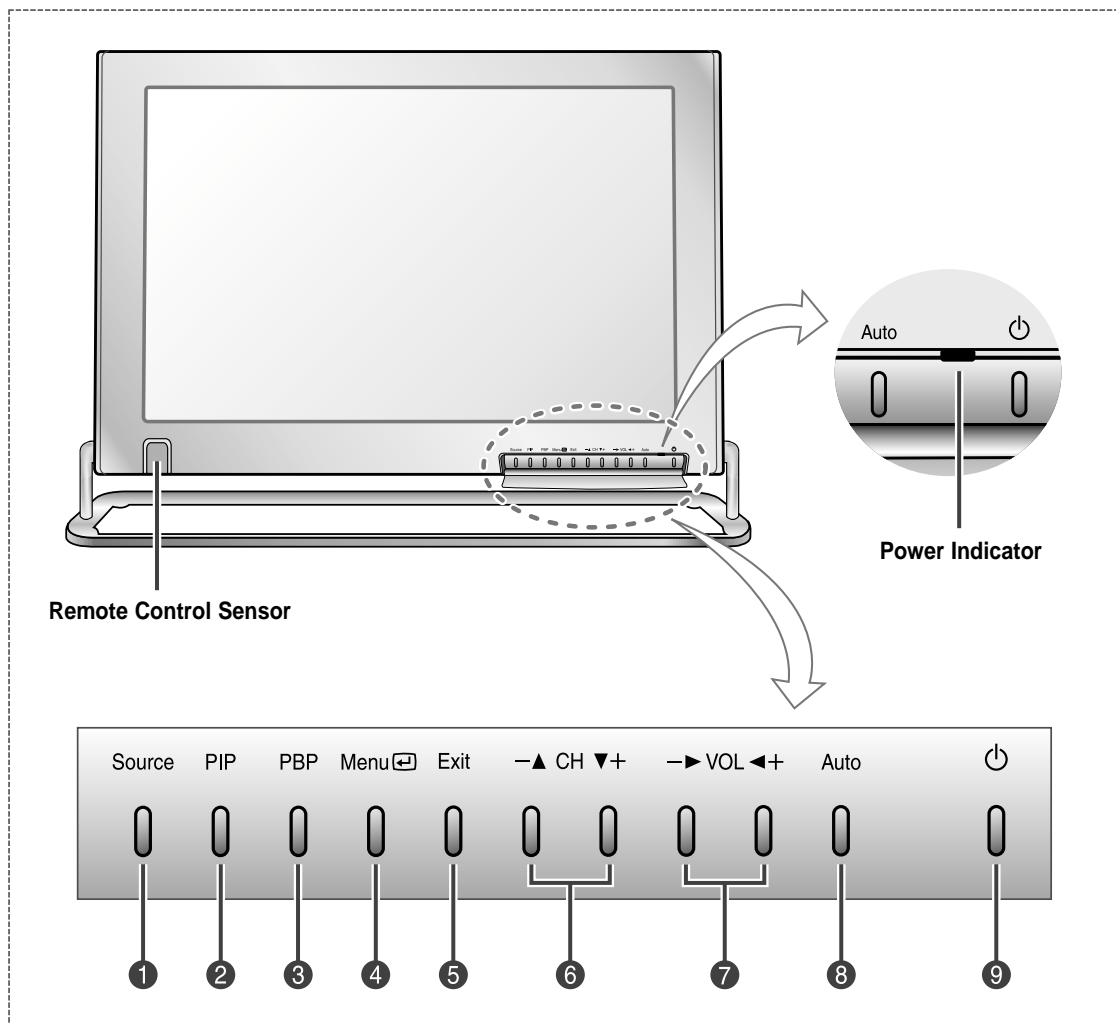
## Viewing the Control Panel



- 1 Source**  
Displays a menu of all of the available input sources (TV/Video/S-Video/DVD/DTV/PC).
- 2 PIP**  
Activates PIP (Picture-In-Picture)
- 3 PBP**  
Activates PBP (Picture-By-Picture).
- 4 Menu**   
Opens the OSD and selects the function.
- 5 Exit**  
Exit from the on-screen menu.
- 6 -▲ CH ▼+**  
Moves the selector up or down on the OSD. Increases or decreases the channel number.
- 7 -▶ VOL ◀+**  
Moves the selector left or right on the OSD. Increases or decreases the level of audio volume and the values of the selected function.
- 8 Auto**  
Allows you experience the quality of displayed picture. The values of fine, coarse and position are adjusted automatically. (It works PC mode only.)
- 9**  (Power)  
Turns ON/OFF your set.

## Installing on the Wall

### 1 **Removing the Stand**

Using a hexagonal wrench, remove the stand.

### 2 **Removing Rubbers**

Remove the four rubbers from the edges.

### 3 **Mounting on the Wall**

Mount the stand on the wall using screws or nails.





### 4 **Fixing the Set**

Using a hexagonal wrench, fix your set into the stand.




#### **Installation Notes**

- ◆ Do not install your set on any place other than vertical walls.
- ◆ To protect the performance of your set and prevent troubles, avoid the followings:
  - Do not install next to smoke and fire detectors.
  - Do not install in an area subjected to vibration or high voltage.
  - Do not install in the wall.
  - Do not install near or around any heating apparatus.
- ◆ Use only recommended parts and components.

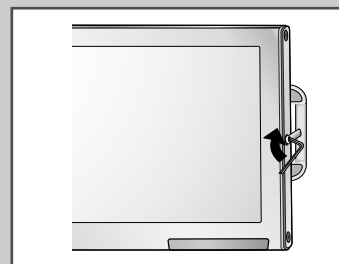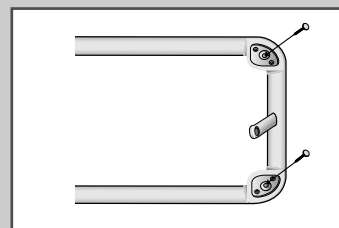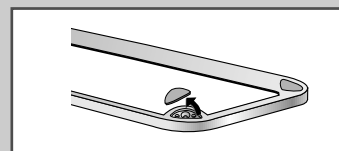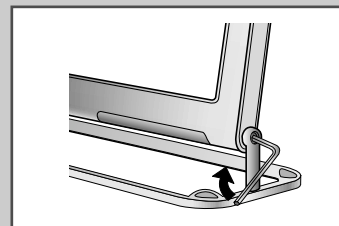

## Viewing the Connection Panel

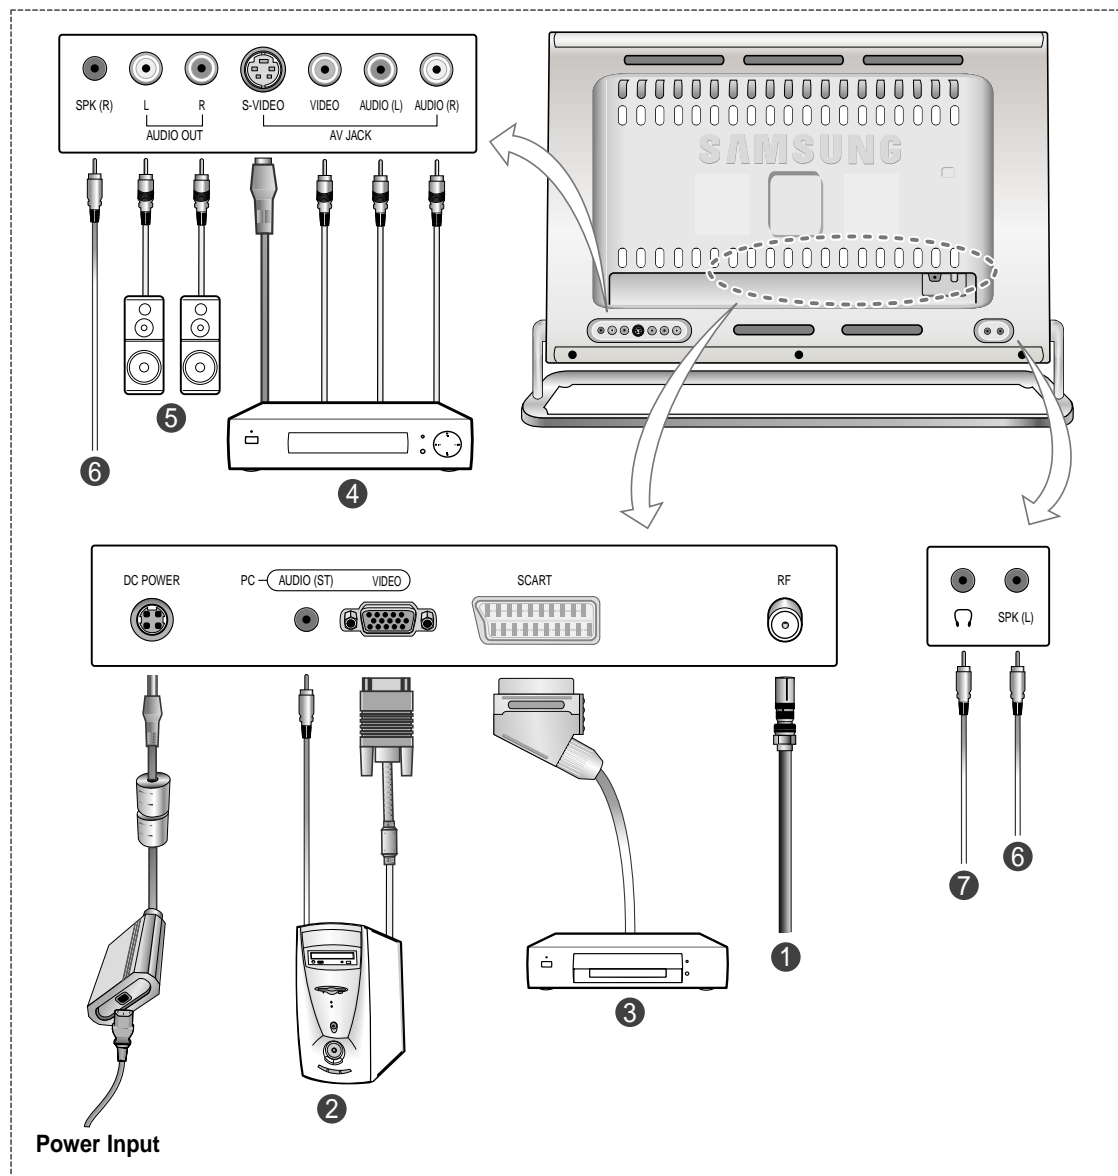

✎ Whenever you connect an audio or video system to your set, ensure that all elements are switched **off**. Refer to the documentation supplied with your equipment for detailed connection instructions and associated safety precautions.

## Viewing the Connection Panel (continued)

### ❶ **Connecting an Aerial or Cable Television Network** (depending on the model)

To view television channels correctly, a signal must be received by the set from one of the following sources:

 
- An outdoor aerial
- A cable television network
- A satellite network

### ❷ **Connecting Computer**

- Connect the 15 Pin D-SUB connector to the PC video connector.
- Connect the stereo audio cable to "Audio (ST)" on the rear of your set and the other end to "Audio Out" of the sound card on your computer.
- If necessary, please install monitor driver contained on the accompanied CD. For more information, refer to the driver installation instructions included with your CD package.

#### ➤ **15 Pin D-SUB connector**

Pin	Separate H/V	Composite H/V	Sync-on-green
1	Red (R)	Red (R)	Red (R)
2	Green (G)	Green (G)	Green (G) + Horizontal/Vertical sync.
3	Blue (B)	Blue (B)	Blue (B)
4	Grounding	Grounding	Grounding
5	Grounding (DDC)	Grounding (DDC)	Grounding (DDC)
6	Red (R) Grounding	Red (R) Grounding	Red (R) Grounding
7	Green (G) Grounding	Green (G) Grounding	Green (G) Grounding
8	Blue (B) Grounding	Blue (B) Grounding	Blue (B) Grounding
9	No connection	No connection	Not used
10	Sync Grounding	Sync Grounding	Sync Grounding
11	Grounding	Grounding	Grounding
12	Data (DDC)	Data (DDC)	Data (DDC)
13	Horizontal sync.	Horizontal/Vertical sync.	Not used
14	Vertical sync.	Not used	Not used
15	Clock (DDC)	Clock (DDC)	Clock (DDC)



## Viewing the Connection Panel

### ③ Connecting DTV Set-Top Box, VCR, or DVD

- Connect the DTV, VCR, or DVD SCART cable to the SCART connector of the DTV, VCR, or DVD.
- If you wish to connect both the DTV Set-Top Box and VCR (or DVD), you should connect the DTV Set-Top Box to the VCR (or DVD) and connect the VCR (or DVD) to your set.


### ④ Connecting External A/V Devices

- Connect RCA or S-VIDEO cable to an appropriate external A/V device such as VCR, DVD, or Camcorder.
- Connect RCA audio cables to "AUDIO (L)" and "AUDIO (R)" on the rear of your set and the other ends to corresponding audio out connectors on the A/V device.
- Headphone may be connected to the headphone output (⑦) on the rear of your set. *While the headphone is connected, the sound from the built-in speakers will be disabled.*

### ⑤ Connecting External Speakers

Connect RCA audio cables to amplifier built-in speakers (to take full advantage of the Surround sound effect).


### ⑥ Connecting Speakers (depending on the model)

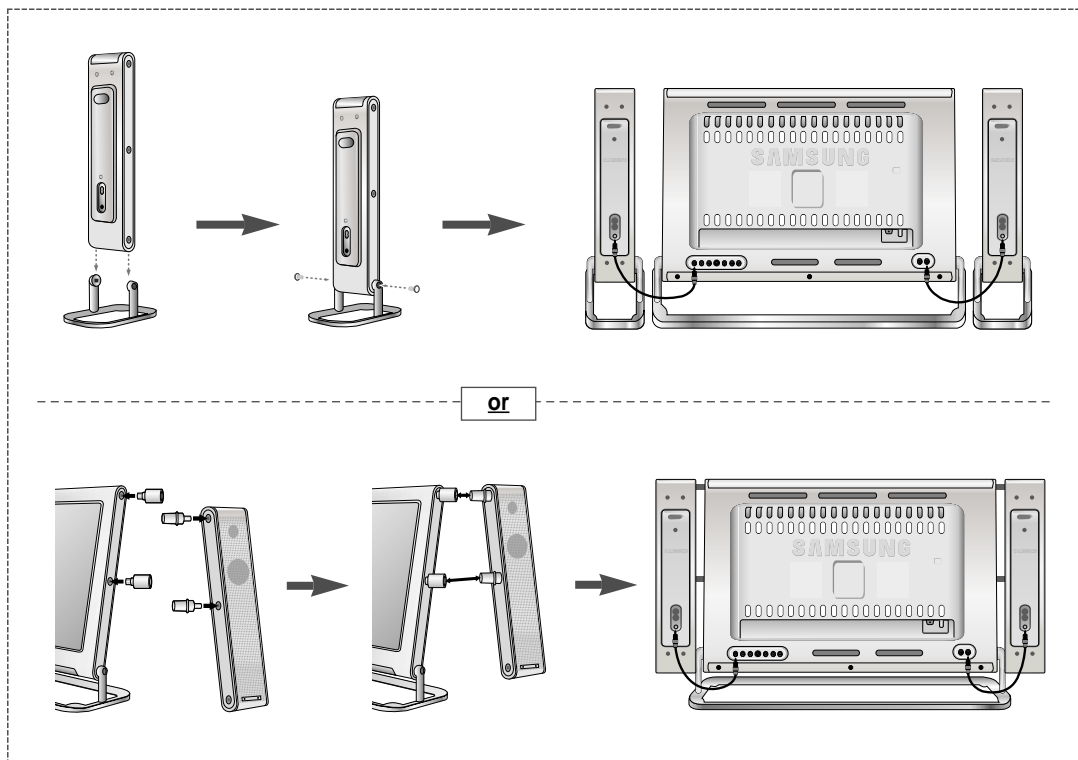


## Viewing Pictures From External Sources

*Once you have connected up your various audio and video systems, you can view the different sources by selecting the appropriate input.*

- 1 Check that all the necessary connections have been made (refer to pages 8 and 9 for further details).
- 2 Switch your set on and if necessary, press the **SOURCE** button repeatedly. The input sources are displayed in the following order:  
**Ant (TV) – Scart – Video – S-Video – PC.**

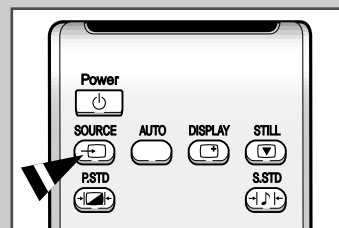


## Viewing the Remote Control (All Functions Except Teletext)

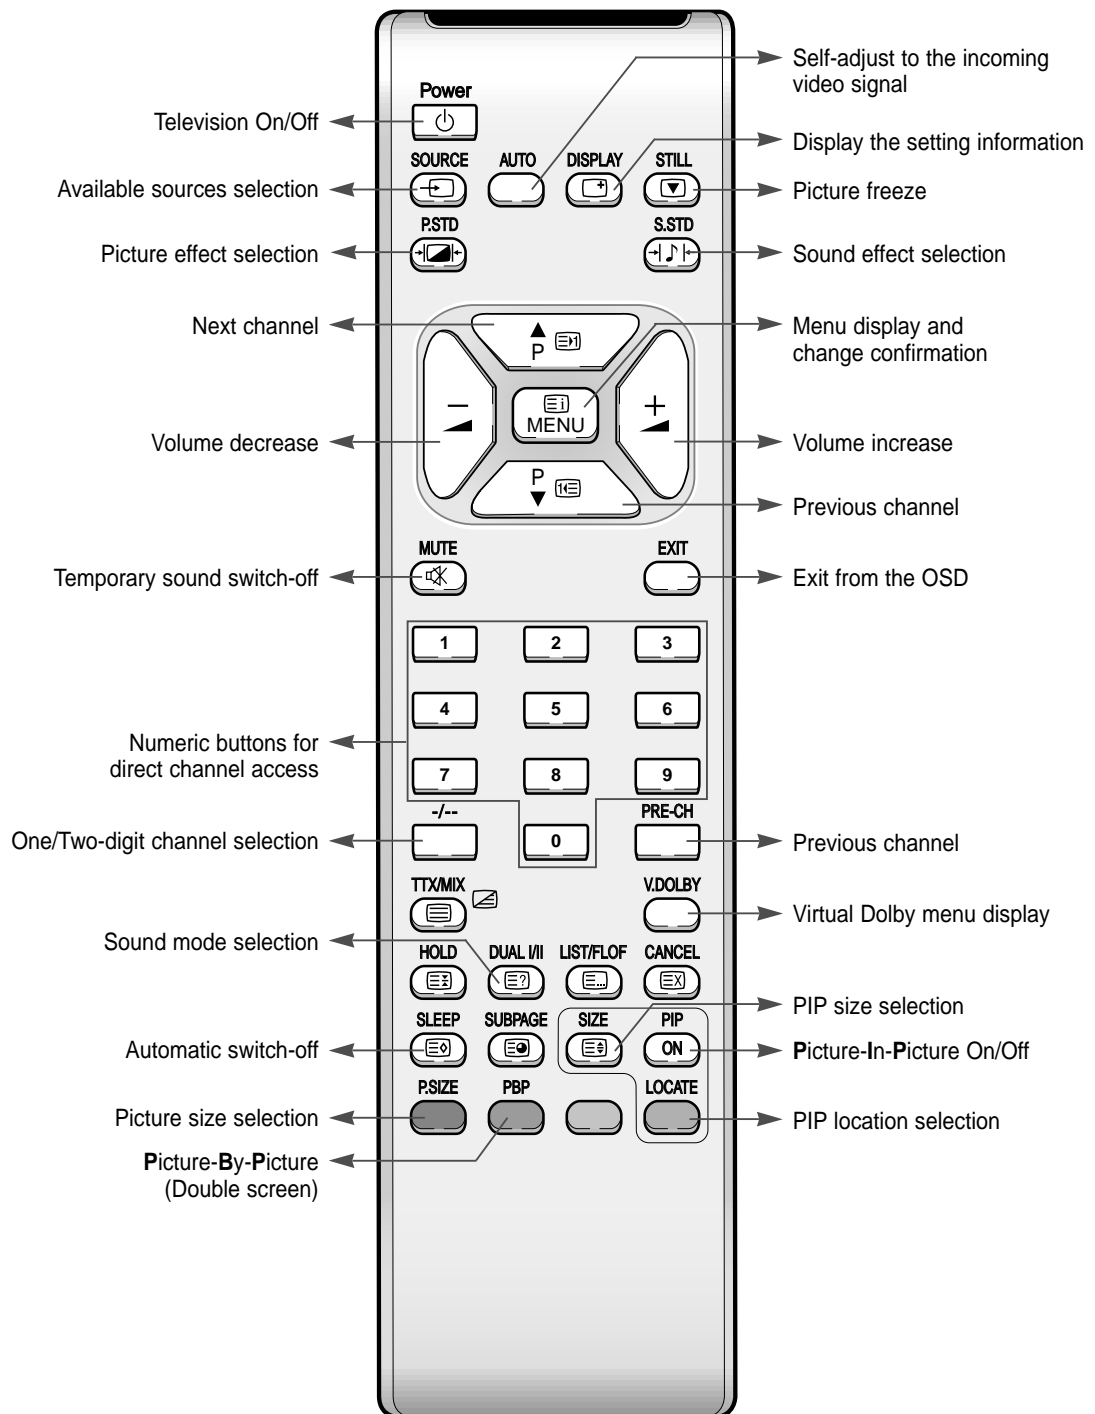


➤ The performance of the remote control may be affected by bright light.



## Viewing the Remote Control (Teletext Functions)

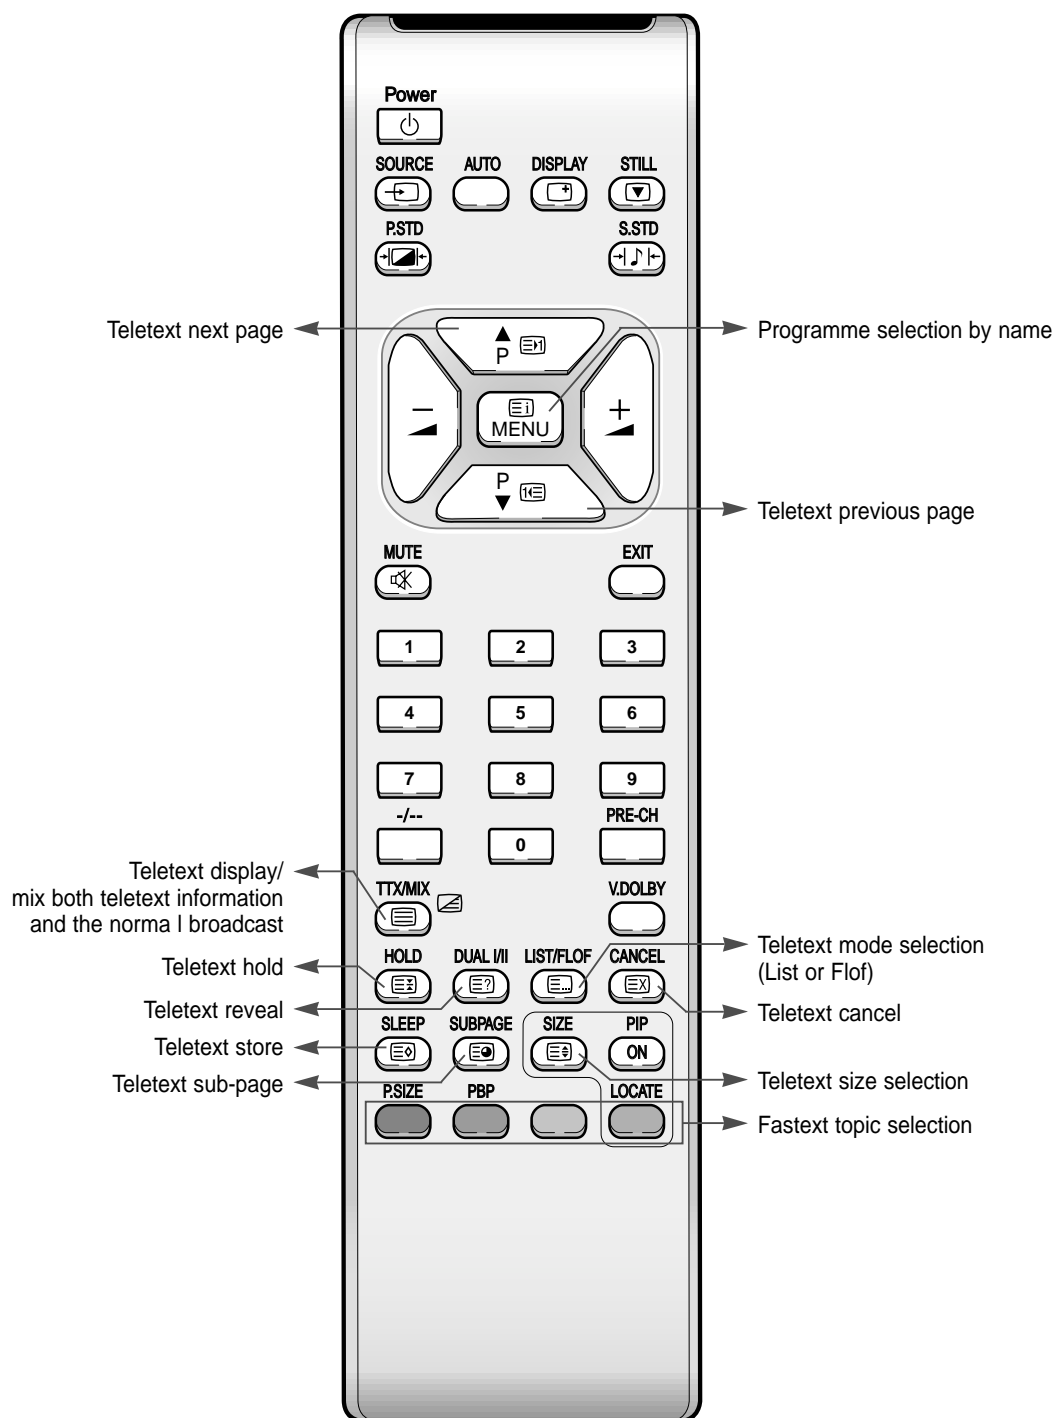

## Inserting the Batteries in the Remote Control

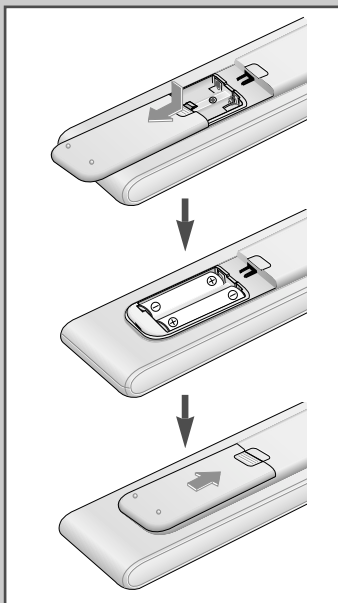



*You must insert or replace the batteries in the remote control when you:*

- ◆ **Purchase your set**
- ◆ **Find that the remote control is no longer operating correctly**

- 1 Remove the cover on the rear of the remote control by pressing the symbol downwards and then pulling firmly to remove it.
- 2 Insert two R03, UM4, "AAA" 1.5V or equivalent batteries taking care to respect the polarities:
  - ◆ + on the battery against + on the remote control
  - ◆ - on the battery against - on the remote control
- 3 Replace the cover by aligning it with the base of the remote control and pressing it back into place.

➤ Do not mix battery types, i.e. alkaline and manganese.

## Switching On and Off

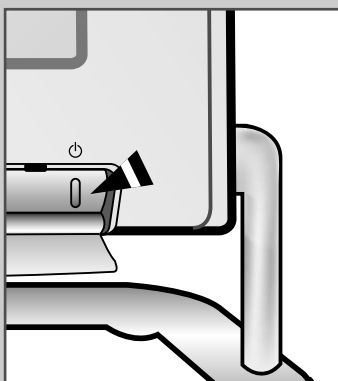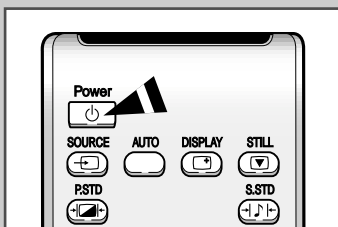

*The mains lead is attached to the rear of your set.*

✎ If you have purchased this set in the United Kingdom, refer to page 39 for further instructions on plug wiring.

Plug the mains lead into an appropriate socket.

**Result:** The screen is turned on and a green Standby indicator appears on the front of your set.

*Your set can be placed in Standby mode, in order to reduce the power consumption.*

*The Standby mode can be useful when you wish to interrupt viewing temporarily (during a meal, for example).*

- 1 Press the **Power** (⏻) button on the remote control or the front of your set.  
**Result:** The screen is turned off and a green Standby indicator disappears on the front of your set.
- 2 To switch your set back on, simply press the **Power** (⏻) button again.

➤ Do not leave your set in Standby mode for long periods of time (when you are away on holiday, for example). Turn your set off by unplugging from the mains and aerial.


## Becoming Familiar with the Remote Control

The remote control is used mainly to:



- ◆ Change channels and adjust the volume
- ◆ Set up your set using the on-screen menu system

The following table presents the most frequently used buttons and their functions.

Button	Viewing Function	Menu Function
<b>▲</b> <b>P</b>	Used to display the next stored channel.	Used to select the previous menu option.
<b>P</b> <b>▼</b>	Used to display the previous stored channel.	Used to select the next menu option.
<b>PRE-CH</b>	Used to switch repeatedly between the last two channels displayed. ( <b>PRE-CH</b> ; Previous Channel)	
<b>0</b> to <b>9</b>	Used to display the corresponding channels.	
<b>-/--</b>	Used to select a channel numbered ten or over. Press this button, and the "--" symbol is displayed. Enter the two-digit channel number.	
<b>—</b> <b>▲</b>	Used to decrease the volume.	Used to... <ul style="list-style-type: none"> <li>◆ Display a submenu containing selections for the current menu option.</li> <li>◆ Search forwards manually for channels</li> <li>◆ Reduce a menu option value.</li> </ul>
<b>+</b> <b>▲</b>	Used to increase the volume.	Used to... <ul style="list-style-type: none"> <li>◆ Display a submenu containing selections for the current menu option.</li> <li>◆ Search backwards manually for channels</li> <li>◆ Increase a menu option value.</li> </ul>
<b>MUTE</b>	Used to switch the sound off temporarily. <ul style="list-style-type: none"> <li>➤ To turn the sound back on, press this button again, or press the <b>—</b> or <b>+</b> button.</li> </ul>	
<b>MENU</b>	Used to display the on-screen menu system.	Used to return to the previous menu or normal viewing.
<b>EXIT</b>	Used to exit from the menu system and return to normal viewing directly.	

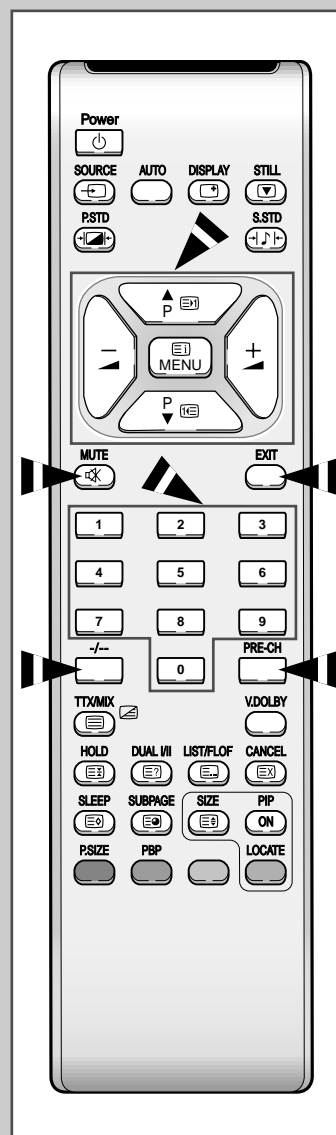

## Choosing Your Language

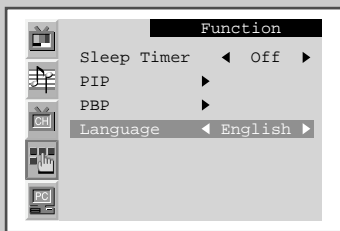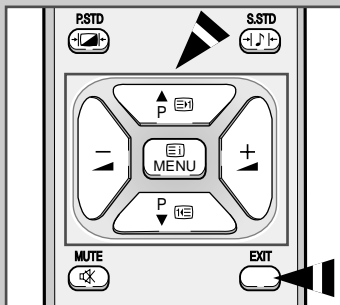

*When you start using your set for the first time, you must select the language which will be used for displaying menus and indications.*

- 1 Press the **MENU** button.  
Result: The main menu is displayed.
- 2 Press the P▼ or P▲ button to select the **Function**.  
Result: The options available in the **Function** group are displayed.
- 3 Press the ◀- or ▶+ button.
- 4 Press the P▼ or P▲ button to select the **Language**.
- 5 Select a particular language by pressing the ◀- or ▶+ button repeatedly.
- 6 When you are satisfied with your choice, press the **EXIT** button to return to normal viewing.

## Storing Channels Automatically

*You can scan for the frequency ranges available to you (and availability depends on your country). Automatically allocated programme numbers may not correspond to actual or desired programme numbers. However you can sort numbers manually and clear any channels you do not wish to watch.*

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the P▼ or P▲ button to select the **Channel**.

Result: The options available in the **Channel** group are displayed.

- 3 Press the ◀- or ▶+ button.

Result: The **Auto store** is selected.

- 4 Press the ◀- or ▶+ button again.

Result: The options available in the **Auto store** group are displayed with the **Country** selected.

 

- 5 Select your country by pressing the ◀- or ▶+ button repeatedly. The following countries are available:  
**Belgie - Deutschland - Espania - France - Italia - Nederland - Schweiz - Sverige - UK - East Europe.**

- 6 Press the P▼ or P▲ button to select the **Search**, and then press the ◀- or ▶+ button.








Result: The search will end automatically. Channels are sorted and stored in an order which reflects their position in the frequency range, (with lowest first and highest last). The programme originally selected is then displayed.

➤ To stop the search before it has finished, press the **EXIT** button.

- 7 When the channels have been stored, you can:
  - ◆ Change channels
  - ◆ Assign a name to the stored channels (refer to page 19)
  - ◆ Clear a channel (refer to page 20)
  - ◆ Fine tune channel reception if necessary (refer to page 20)
  - ◆ Sort them in the order required (refer to page 21)

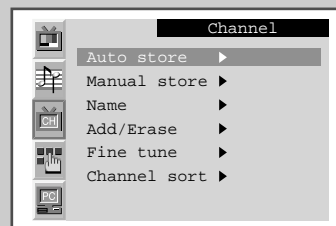

## Storing Channels Manually

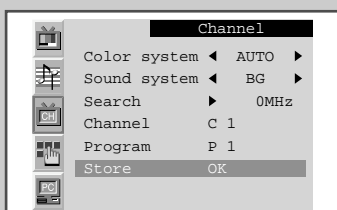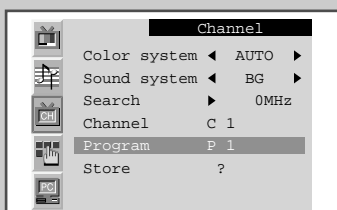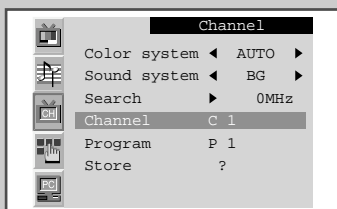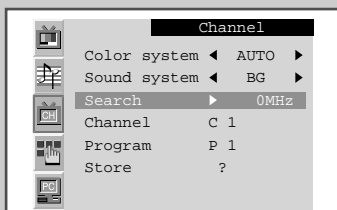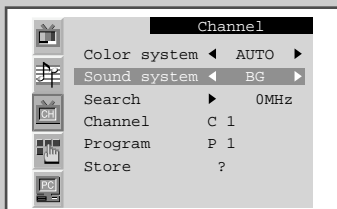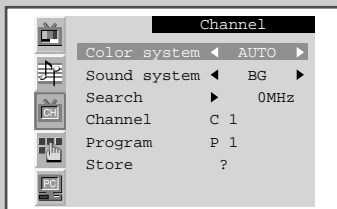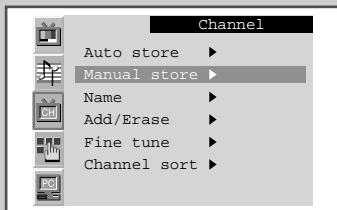

English-18

*You can store up to 100 channels, including those received via cable networks. When storing channels manually, you can choose:*

- ◆ *Whether or not to store each of the channels found*
- ◆ *The programme number of each stored channel which you wish to identify*

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the P▼ or P▲ button to select the **Channel**.

Result: The options available in the **Channel** group are displayed.

- 3 Press the ◀- or ▶+ button.

- 4 Press the P▼ or P▲ button to select the **Manual store**. Press the ◀- or ▶+ button.

Result: The options available in the **Manual store** group are displayed with the **Color system** is selected.

- 5 If necessary, indicate the broadcasting standard required by pressing the ◀- or ▶+ button repeatedly.

Result: The color standards are displayed in the following order:  
**AUTO – PAL – SECAM – NT4.43.**

- 6 Press the P▼ or P▲ button to select the **sound system**. Indicate the sound standard required by pressing the ◀- or ▶+ button repeatedly.

Result: The sound standards are displayed in the following order:  
**BG – DK – I – L.**

- 7 If you know the channel number to be stored, press the P▼ or P▲ button to select the **Channel**. Indicate the required number by pressing the ◀- or ▶+ button.

If you do not know the channel numbers, press the P▼ or P▲ button to select the **search**. Start the search by pressing the ◀- or ▶+ button.

Result: The tuner scans the frequency range until the first channel or the channel that you selected is received on your screen.

- 8 To assign a programme number to a channel, select the **Program** by pressing the P▼ or P▲ button. Press the ◀- or ▶+ button to find the correct number.

- 9 Press the P▼ or P▲ button to select the **store**. Select the **OK** by pressing the ◀- or ▶+ button.

Result: The channel and associated programme number are stored.

- 10 Repeat Steps 7 to 9 for each channel to be stored.

## Giving Channels Names

*If channel name information is broadcast when you store the channels either manually or automatically, the names are assigned to the channels directly. You can however change these names or assign new names as required.*

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the P▼ or P▲ button to select the **Channel**.

Result: The options available in the **Channel** group are displayed.

- 3 Press the ◀- or ▶+ button.

- 4 Press the P▼ or P▲ button to select the **Name**. Press the ◀- or ▶+ button.




Result: The current channels are displayed.

- 5 If necessary, select the channel to be assigned to a new name by pressing the P▼ or P▲ button.




- 6 Press the ◀- or ▶+ button.

- 7 Press the P▼ or P▲ button to select a letter (A~Z), a number(0~9) or a symbol (-, space). Move on the previous or next letter by pressing the ◀- or ▶+ button.

- 8 Repeat Steps 5 to 7 for each channel to be assigned to a new name.

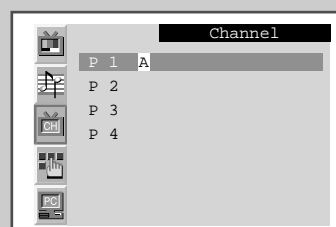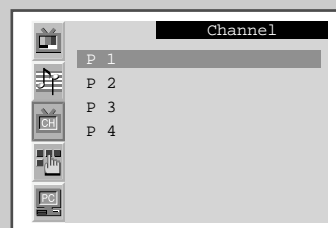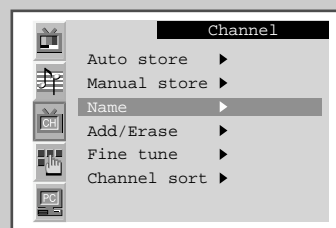

## Skiping Unwanted Channels

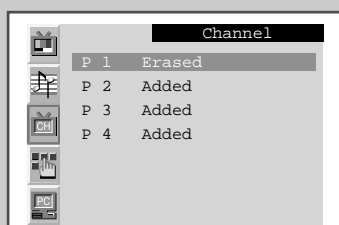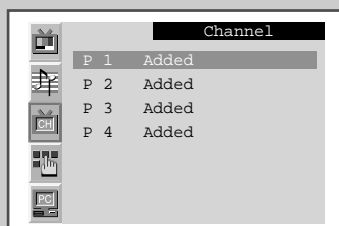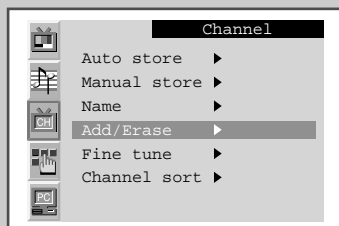

*You can exclude the channels you chosen from the channels you scanned. When you scan through the stored channels, those you have chosen to skip are not displayed.*

*All channels that you do not specifically choose to skip are displayed during scanning.*

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the P▼ or P▲ button to select the **Channel1**.

Result: The options available in the **Channel1** group are displayed.

- 3 Press the ◀- or ▶+ button.



- 4 Press the P▼ or P▲ button to select the **Add/Erase**. Press the ◀- or ▶+ button.

Result: The stored channels are displayed.

- 5 Press the P▼ or P▲ button to select the channel to add or erase. If necessary, select the **Added** or **Erased** by pressing the ◀- or ▶+ button.

- 6 Repeat Step 5 for each channel to be added or erased.

## Fine Tuning Channel Reception

 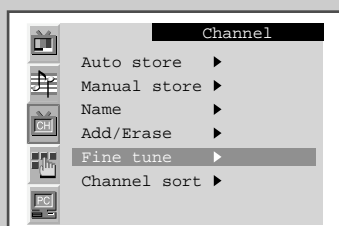

*If the reception is clear, you do not have to fine-tune the channel, as this is done automatically during the search and store operation. If however the signal is weak or distorted, you may have to fine-tune the channel manually.*

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the P▼ or P▲ button to select the **Channel1**.

Result: The options available in the **Channel1** group are displayed.

- 3 Press the ◀- or ▶+ button.

- 4 Press the P▼ or P▲ button to select the **Fine tune**.

- 5 Obtain a sharp and clear picture and good sound quality by pressing the ◀- or ▶+ button.



## Sorting the Stored Channels

*You can exchange the numbers of two channels, in order to:*

- ◆ *Modify the numeric order in which the channels have been automatically stored.*
- ◆ *Give easily remembered numbers to the channels that you watch most often.*

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the P▼ or P▲ button to select the **Channel**.

Result: The options available in the **Channel** group are displayed.

- 3 Press the ▲- or ▲+ button.

- 4 Press the P▼ or P▲ button to select the **Channel sorting**. Press the ▲- or ▲+ button.

Result: The options available in the **Channel sorting** group are displayed with the **From** is selected.





- 5 Select the channel number that you wish to change by pressing the ▲- or ▲+ button repeatedly.

- 6 Press the P▼ or P▲ button to select the **To**. Select the new number by which you wish to identify the channel by pressing the ▲- or ▲+ button repeatedly.



- 7 Press the P▼ or P▲ button to select the **store**. Select the **OK** to confirm the exchange of channel numbers by pressing the ▲- or ▲+ button.

Result: The selected channel is exchanged with the one previously stored to the chosen number.

- 8 For all the channels to move to the required channel numbers, repeat steps 5 to 7 after select the **From** by pressing the P▼ or P▲ button.

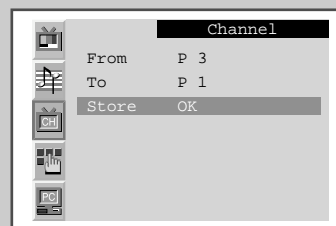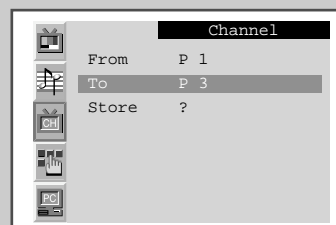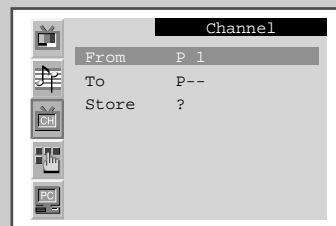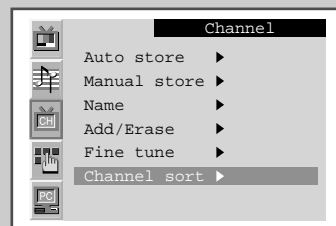

## Changing the Picture Standard

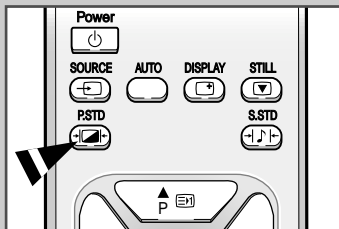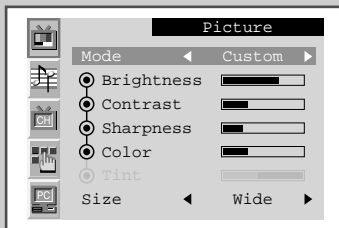

*You can select the type of picture which best corresponds to your viewing requirements.*

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the P▼ or P▲ button to select the **Picture**.

Result: The options available in the **Picture** group are displayed.

- 3 Press the ◀- or ▶+ button.



Result: The **Mode** is selected.

- 4 Select the required picture effect by pressing the ◀- or ▶+ button repeatedly. The following picture effects are available:  
**Custom** – **Standard** – **Natural** – **Mild**.

➤ You can also set these options simply by pressing the **P.STD** (Picture Standard) button.

➤ On the **Picture** menu, if you change the **Brightness**, **Contrast**, **Sharpness**, **Color** or **Tint** (NTSC only) settings, the **Custom** is selected automatically.

## Adjusting the Picture Settings

 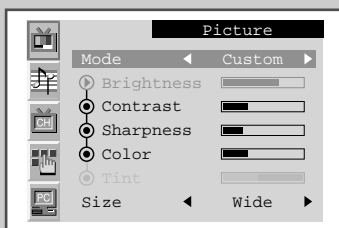

*Your set has several settings which allow you to control picture quality.*

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the P▼ or P▲ button to select the **Picture**.

Result: The options available in the **Picture** group are displayed.

- 3 Press the ◀- or ▶+ button.

- 4 Select the option (**Brightness**, **Contrast**, **Sharpness**, **Color** or **Tint**-NTSC only) to be adjusted by pressing the P▼ or P▲ button. Press the ◀- or ▶+ button.

Result: The horizontal bar is displayed.



- 5 Press the ◀- or ▶+ button to reach the required setting.

➤ If you make any changes to these settings, the picture standard is automatically switched to **Custom**.

## Selecting the Picture Format


*You can select the picture format which best corresponds to your viewing requirements.*

- 1 Press the **MENU** button.  
Result: The main menu is displayed.
- 2 Press the P▼ or P▲ button to select the **Picture**.  
Result: The options available in the **Picture** group are displayed.
- 3 Press the ◀- or ▶+ button.
- 4 Press the P▼ or P▲ button to select the **Size**.
- 5 Select the required picture format by pressing the ◀- or ▶+ button repeatedly. The following picture formats are available:  
Wide – Normal 1 – Normal 2 – Zoom 1 – Zoom 2.  
➤ You can also select these options simply by pressing the **P.SIZE** (Picture Size) button.

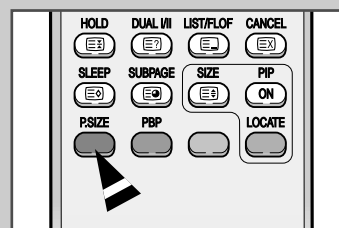
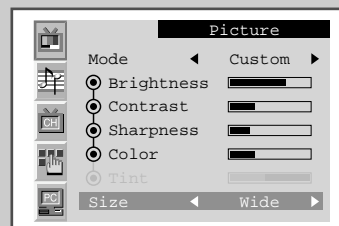


## Freezing the Current Picture

*Press the **STILL** button on the remote control to freeze the picture on a given frame.  
To return to normal viewing, press the **STILL** button again.*

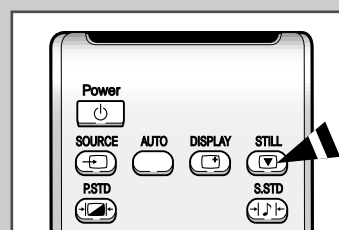

## Changing the Sound Standard

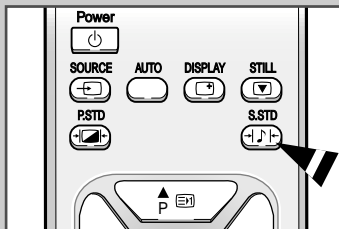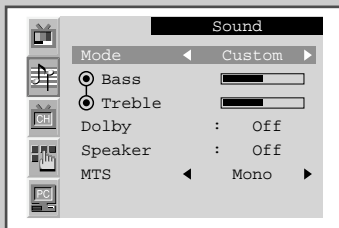

*You can select the type of special sound effect to be used when watching a given broadcast.*

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the P▼ or P▲ button to select the **Sound**.

Result: The options available in the **Sound** group are displayed.


- 3 Press the ◀- or ▶+ button.

Result: The **Mode** is selected.

- 4 Select the required sound effect by pressing the ◀- or ▶+ button repeatedly. The following sound effects are available:  
**Custom** – **Standard** – **Music** – **Movie** – **Speech**.

➤ You can also set these options simply by pressing the **S.STD** (Sound Standard) button.

## Adjusting the Sound Settings

 

*The sound settings can be adjusted to suit your personal preferences.*

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the P▼ or P▲ button to select the **Sound**.

Result: The options available in the **Sound** group are displayed.

- 3 Press the ◀- or ▶+ button.

- 4 Select the option (**Bass** or **Treble**) to be adjusted by pressing the P▼ or P▲ button. Press the ◀- or ▶+ button.

Result: The horizontal bar is displayed.


- 5 Press the ◀- or ▶+ button to reach the required setting.

➤ If you make any changes to these settings, the sound standard is automatically switched to **Custom**.

## Enjoying the Dolby Sound

*This feature provides a home theater-like Dolby effect by mixing the left and right speakers.*


- 1 Press the **MENU** button.  
Result: The main menu is displayed.
- 2 Press the P▼ or P▲ button to select the **sound**.  
Result: The options available in the **sound** group are displayed.
- 3 Press the ◀- or ▶+ button.
- 4 Press the P▼ or P▲ button to select the **Dolby**.
- 5 For enjoying the Dolby sound effect, select the **On** by pressing the ◀- or ▶+ button.  
➤ You can also select simply by pressing the **V.DOLBY** (Virtual Dolby) button.

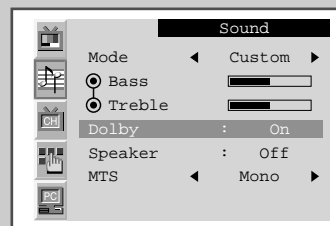



## Switching the Internal Speakers On/Off

*When the internal speakers are switched off, all the sound is routed to the external speakers.*

- 1 Press the **MENU** button.  
Result: The main menu is displayed.
- 2 Press the P▼ or P▲ button to select the **sound**.  
Result: The options available in the **sound** group are displayed.
- 3 Press the ◀- or ▶+ button.
- 4 Press the P▼ or P▲ button to select the **speaker**.
- 5 Select the **On** to be routed the sound to the internal speakers by pressing the ◀- or ▶+ button.

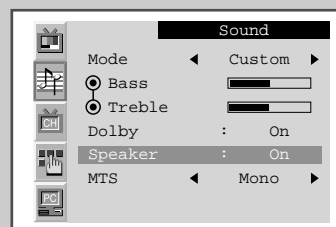

## Choosing the MTS (Multichannel Television Stereo)

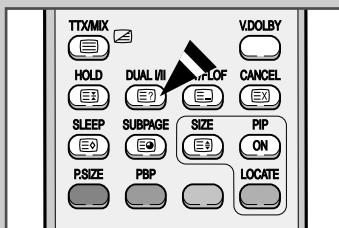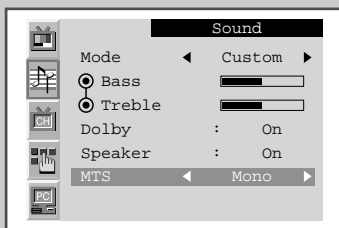

*Depending on the particular program being broadcast, you can listen to Stereo, Mono, or Dual I/II (Dual I/II is usually a foreign-language translation).*

- 1 Press the **MENU** button.  
Result: The main menu is displayed.
- 2 Press the P▼ or P▲ button to select the **Sound**.  
Result: The options available in the **sound** group are displayed.
- 3 Press the ◀- or ▶+ button.
- 4 Press the P▼ or P▲ button to select the **MTS**.
- 5 Select the required sound mode by pressing the ◀- or ▶+ button repeatedly. The sound modes are displayed in the following order: **Mono** – **Stereo** – **Dual I** – **Dual II**.

*You can also set these options simply by pressing the **DUAL I/II** button. The “**DUAL I/II**” button displays/controls the processing and output of the audio signal.*

- ♦ If the receiving conditions deteriorate, listening will be easier if the mode is set to the **Mono**.
- ♦ If the stereo signal is weak and an automatic switching occurs, then switch to the **Mono**.
- ♦ When receiving a mono sound in the AV mode, connect to the “**AUDIO (L)**” connector on the rear panel.

## Viewing the Picture In Picture (PIP)

*You can display a sub picture within the main picture of TV program or external A/V devices such as VCR or DVD. In this way you can watch TV program or monitor the video input from any connected devices while watching TV or other video input.*

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the P▼ or P▲ button to select the **Function**.

Result: The options available in the **Function** group are displayed.

- 3 Press the ◀- or ▶+ button.

- 4 Press the P▼ or P▲ button to select the **PIP**. Press the ◀- or ▶+ button.

Result: The options available in the **PIP** group are displayed.

- 5 Select the **On** by pressing the ◀- or ▶+ button.

➤ You can also activate the PIP simply by pressing the **PIP ON** button. To deactivate the PIP, press it again.

- 6 Press the P▼ or P▲ button to select the **TV/Video**. Select a source of the sub picture by pressing the ◀- or ▶+ button.

Result: The sources are displayed in the following order:  
**TV - Scart - Video - S-Video.**







- 7 Press the P▼ or P▲ button to select the **Size**. Select a size of the sub picture by pressing the ◀- or ▶+ button.

Result: The sizes are displayed in the following order:  
**Small - Medium - Large.**






➤ You can also select these options simply by pressing the **SIZE** button.

- 8 Press the P▼ or P▲ button to select the **Position**. Move the sub picture counterclockwise by pressing the ◀- or ▶+ button.

➤ You can also move the sub picture simply by pressing the **LOCATE** button.

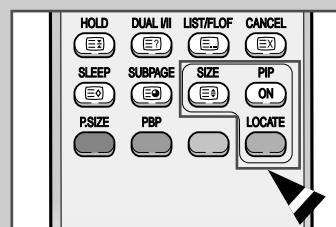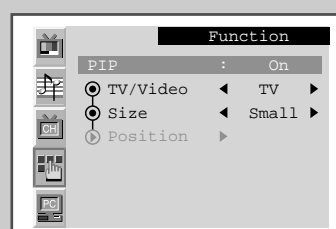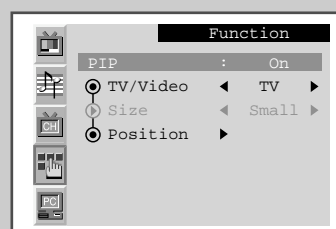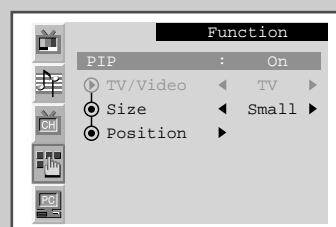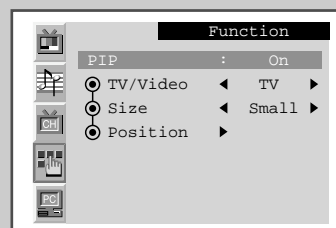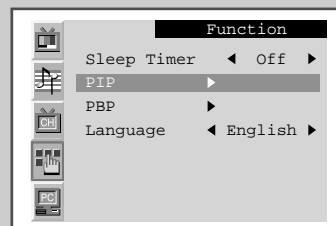

## Viewing the Picture By Picture (PBP; Double Screen)

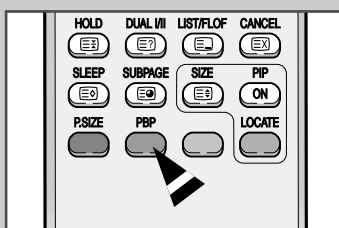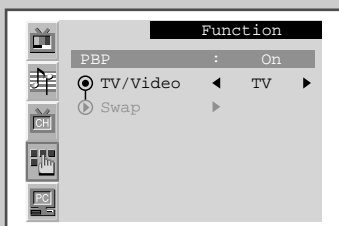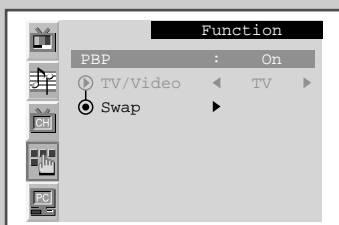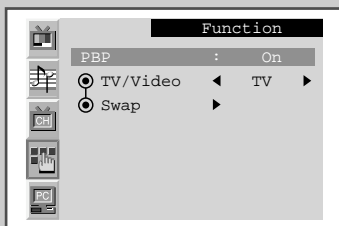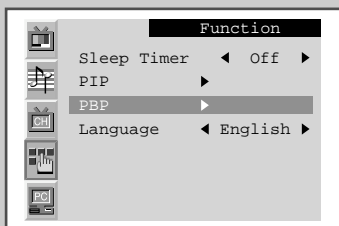

English-28

*When external A/V devices (PC, VCR, or DVD) are connected to your set or watching TV, you can display two video sources simultaneously in the screen.*

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the P▼ or P▲ button to select the **Function**.

Result: The options available in the **Function** group are displayed.

- 3 Press the ◀- or ▶+ button.

- 4 Press the P▼ or P▲ button to select the **PBP**. Press the ◀- or ▶+ button.

Result: The options available in the **PBP** group are displayed.

- 5 Select the **On** by pressing the ◀- or ▶+ button.

➤ You can also activate the PBP simply by pressing the **PBP** button. To deactivate the PBP, press it again.

- 6 Press the P▼ or P▲ button to select the **TV/Video**. Select a source of the sub picture by pressing the ◀- or ▶+ button.

Result: The sources are displayed in the following order:  
**TV - Scart - Video - S-Video.**

- 7 Press the P▼ or P▲ button to select the **Swap**.

- 8 Press the ◀- or ▶+ button.

Result: The main picture and the sub picture are interchanged.

➤ You can also do simply by pressing the **PBP** button.





## Switching Off Automatically

*You can select a time period of between 10 and 240 minutes after your set automatically switches off.*

- 1 Press the **MENU** button.  
Result: The main menu is displayed.
- 2 Press the P▼ or P▲ button to select the **Function**.  
Result: The options available in the **Function** group are displayed.
- 3 Press the ◀- or ▶+ button.  
Result: The **Sleep Timer** is selected.
- 4 Select the number of minutes after which your set switches off by pressing the ◀- or ▶+ button repeatedly.
  - ◆ The preset time intervals: 10, 20, 30, 60, 90, 120, 150, 180, 210, and 240 minutes.


➤ You can also select simply by pressing the “SLEEP” button.

If the sleep timer is already set, the screen displays the remaining time and then your set will be switched off. If the sleep timer is not yet set, displays **OFF**.

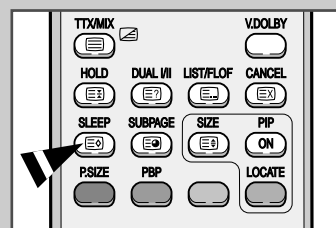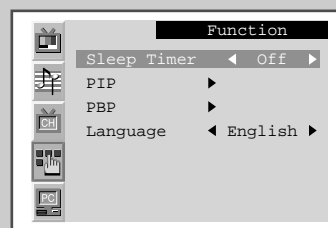




## Displaying Information

*You can view the setting status of selected source by pressing the “DISPLAY” button on the remote control. The displayed information are different depending on the selected source.*

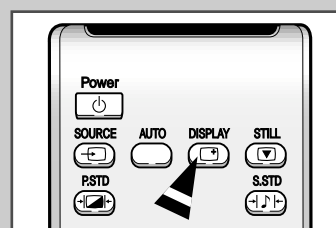

## Adjusting the Brightness and Contrast

 

➤ Preset to the PC mode by pressing the **SOURCE** button.

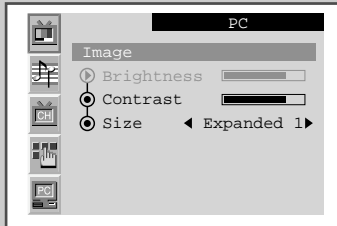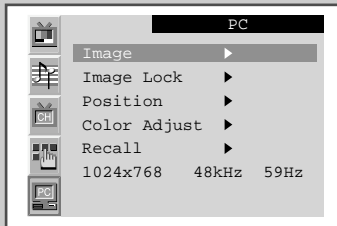

- 1 Press the **MENU** button.  
Result: The main menu is displayed.
- 2 Press the P▼ or P▲ button to select the **PC**.  
Result: The options available in the **PC** group are displayed.
- 3 Press the ◀- or ▶+ button.  
Result: The **Image** is selected.
- 4 Press the ◀- or ▶+ button again.  
Result: The options available in the **Image** group are displayed.
- 5 Select the option (**Brightness** or **Contrast**) to be adjusted for the color of your computer image by pressing the P▼ or P▲ button. Press the ◀- or ▶+ button.  
Result: The horizontal bar is displayed.
- 6 Press the ◀- or ▶+ button to reach the required setting.

## Selecting the Image Size

➤ Preset to the PC mode by pressing the **SOURCE** button.

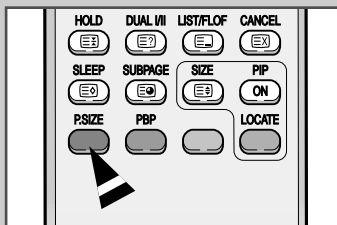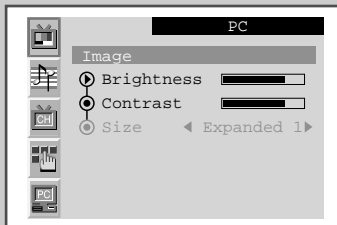

- 1 Press the **MENU** button.  
Result: The main menu is displayed.
  - 2 Press the P▼ or P▲ button to select the **PC**.  
Result: The options available in the **PC** group are displayed.
  - 3 Press the ◀- or ▶+ button.  
Result: The **Image** is selected.
  - 4 Press the ◀- or ▶+ button again.  
Result: The options available in the **Image** group are displayed.
  - 5 Press the P▼ or P▲ button to select the **size**. Select a size of the your computer image by pressing the ◀- or ▶+ button.  
Result: The sizes are displayed in the following order:  
**Expanded 1 - Expanded 2 - Normal.**
- You can also select these options simply by pressing the **P.SIZE** (Picture Size) button.




## Adjusting the Image Quality

 ➤ Preset to the PC mode by pressing the **SOURCE** button.

*This feature is used to fine tune and get the best image by removing noises that create unstable images with jitters and shimmers.*

- 1 Press the **MENU** button.  
Result: The main menu is displayed.
- 2 Press the P▼ or P▲ button to select the **PC**.  
Result: The options available in the **PC** group are displayed.
- 3 Press the ◀- or ▶+ button.
- 4 Press the P▼ or P▲ button to select the **Image Lock**. Press the ◀- or ▶+ button.  
Result: The options available in the **Image Lock** group are displayed.
- 5 Select the option (**Coarse** or **Fine**) to be adjusted for the quality of your computer image by pressing the P▼ or P▲ button. Press the ◀- or ▶+ button.  
Result: The horizontal bar is displayed.
- 6 Press the ◀- or ▶+ button to reach the required setting.




➤ This feature may change the width of the image. If necessary, adjust the position to center.

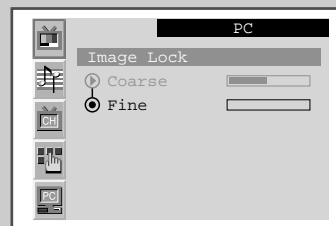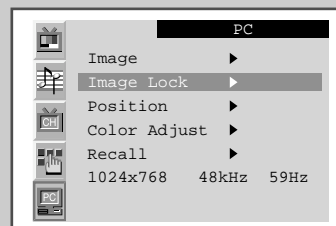




## Changing the Image Position

➤ Preset to the PC mode by pressing the **SOURCE** button.

 - 1 Press the **MENU** button.  
Result: The main menu is displayed.
- 2 Press the P▼ or P▲ button to select the **PC**.  
Result: The options available in the **PC** group are displayed.
- 3 Press the ◀- or ▶+ button.
- 4 Press the P▼ or P▲ button to select the **Position**. Press the ◀- or ▶+ button.
- 5 Select the position (**H-Position** or **V-Position**) to be adjusted by pressing the P▼ or P▲ button. Press the ◀- or ▶+ button.  
Result: The horizontal bar is displayed.
- 6 Press the ◀- or ▶+ button to reach the required setting.

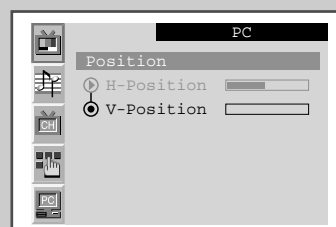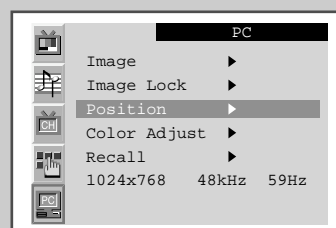

## Adjusting the Color

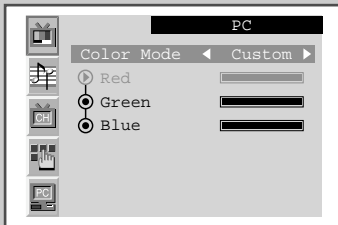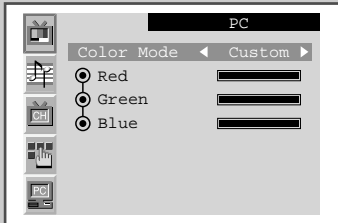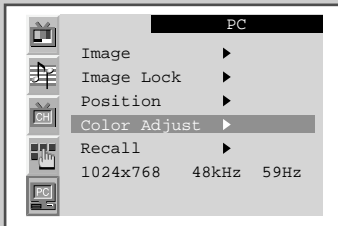

➤ Preset to the PC mode by pressing the **SOURCE** button.



- 1 Press the **MENU** button.  
Result: The main menu is displayed.
- 2 Press the P▼ or P▲ button to select the **PC**.  
Result: The options available in the **PC** group are displayed.
- 3 Press the ◀- or ▶+ button.
- 4 Press the P▼ or P▲ button to select the **Color Adjust**. Press the ◀- or ▶+ button.  
Result: The options available in the **Color Adjust** group are displayed with the **Color Mode** is selected.
- 5 Select the required color mode by pressing the ◀- or ▶+ button repeatedly. The following color modes are available: **Custom** – **Color 1** – **Color 2** – **Color 3**.
- 6 If you wish adjust the color which best corresponds to your viewing requirements, select the option (**Red**, **Green**, or **Blue**) to be adjusted by pressing the P▼ or P▲ button. Press the ◀- or ▶+ button.  
Result: The horizontal bar is displayed.
- 7 Press the ◀- or ▶+ button to reach the required setting.

➤ If you change the **Red**, **Green**, or **Blue** settings, the **Color mode** is selected to **Custom** automatically.

## Initializing the Image Settings

➤ Preset to the PC mode by pressing the **SOURCE** button.

*You can replace all image settings with the factory default values.*

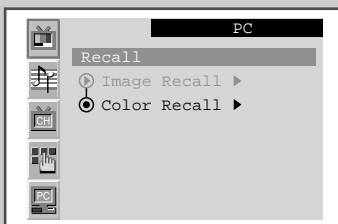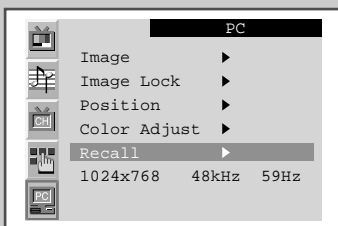

- 1 Press the **MENU** button.  
Result: The main menu is displayed.
- 2 Press the P▼ or P▲ button to select the **PC**.  
Result: The options available in the **PC** group are displayed.
- 3 Press the ◀- or ▶+ button.
- 4 Press the P▼ or P▲ button to select the **Recall**. Press the ◀- or ▶+ button.  
Result: The options available in the **Recall** group are displayed.
- 5 Select the option (**Image Recall** or **Color Recall**) to be replaced by pressing the P▼ or P▲ button. Press the ◀- or ▶+ button.  
Result: The screen becomes black and return to original view about a few seconds later.

## Display Modes

*If the signal from the system equals to the standard signal mode, the screen is adjusted automatically. If the signal from the system doesn't equal to the standard signal mode, adjust the mode with referring to the Video card user guide because the screen might not display or only the power LED might be on. For the display modes listed below, the screen image has been optimized during manufacture.*

Mode	Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock Frequency (MHz)	Sync Polarity (H/V)
<b>VGA</b>	720 x 400	31.469	70.087	28.322	- / +
	640 x 480	31.469	59.940	25.175	- / -
	640 x 480	37.500	75.000	31.500	- / -
	640 x 480	43.269	85.008	36.000	- / -
<b>SVGA</b>	800 x 600	46.875	75.000	49.500	+ / +
	800 x 600	53.674	85.061	56.250	+ / +
<b>XGA</b>	1024 x 768	48.363	60.004	65.000	- / -
	1024 x 768	60.023	75.029	78.750	+ / +
	1024 x 768	68.677	84.997	94.500	+ / +
<b>SXGA</b>	1280 x 1024	63.981	60.020	108.000	+ / -, + / -
	1280 x 1024	79.976	75.025	135.000	+ / +
<b>UXGA</b>	1600 x 1200	75.000	60.000	162.000	+ / -, + / -
<b>WUXGA</b> (SyncMaster 241MP)	1920 x 1200	75.000	60.000	193.156	+ / -, + / -


## PowerSaver

*This set has a built-in power management system called PowerSaver. This system saves energy by switching your set into a low-power mode when it has not been used for a certain period of time. The available modes are "On", "Standby", "Sleep", and "Deep Sleep". PowerSaver operates with a VESA DPMS compliant video card installed in your computer. You use a software utility installed on your computer to set up this feature.*

State	Normal Operation	Power-Saving Function mode (EPA/NUTEK)
<b>Horizontal Sync</b>	Active	Inactive
<b>Vertical Sync</b>	Active	Inactive
<b>Power Indicator</b>	Green	Green, Blinking (1 sec interval)
<b>Power Consumption</b>	SyncMaster 211MP : 110W (Max.) SyncMaster 241MP : 120W (Max.)	Less than 8W

- *This set automatically returns to normal operation when horizontal and vertical sync return. This occurs when you move the computer's mouse or press a key on the keyboard.*

## Teletext Feature

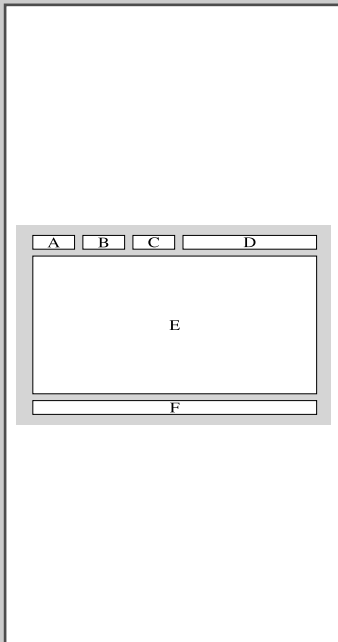

*Most television channels provide written information services via teletext. Information provided includes:*

- ◆ *Television programme times*
- ◆ *News bulletins and weather forecasts*
- ◆ *Sports results*
- ◆ *Travel information*


*This information is divided into numbered pages (see diagram).*

Part	Contents
A	Selected page number.
B	Broadcasting channel identity.
C	Current page number or search indications.
D	Date and time.
E	Text.
F	Status information. FASTEXT information.

➤ Teletext information is often divided between several pages displayed in sequence, which can be accessed by:

- ◆ Entering the page number
- ◆ Selecting a title in a list
- ◆ Selecting a coloured heading (FASTEXT system)

## Displaying the Teletext Information

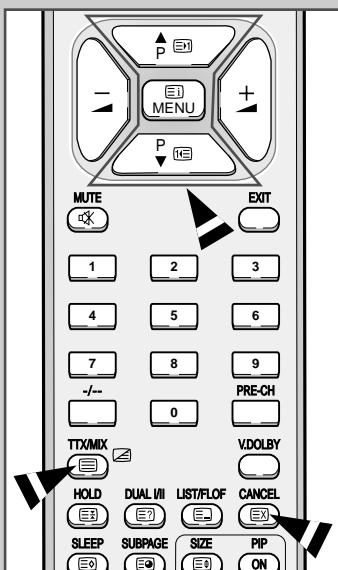

English-34

*You can display Teletext information at any time on your set.*

- ✎ For Teletext information to be displayed correctly, channel reception must be stable; otherwise:
  - ◆ Information may be missing
  - ◆ Some pages may not be displayed

- 1 Select the channel providing the Teletext service using the P▼ or P▲ button.
- 2 Press the **TTX/MIX** button to activate the teletext mode.  
Result: The contents page is displayed. It can be redisplayed at any time by pressing the (E) (index) button.
- 3 If you wish to display the actual broadcast at the same time as the teletext page, press the **TTX/MIX** button again.
- 4 To return to normal viewing, press the **CANCEL** (E) button.
- 5 Press the **TTX/MIX** button again to exit from the teletext display.


## Selecting a Page by Number

*You can enter the page number directly by pressing the numeric buttons on the remote control.*



- 1 Enter the three-digit page number given in the content by pressing the corresponding numeric buttons.  
**Result:** The current page counter is incremented and the page is then displayed.
- 2 If the selected page is linked with several secondary pages, the secondary pages are displayed in sequence. To freeze the display on a given page, press the **HOLD** (E3) button. Press the **HOLD** (E3) button again to resume.

*Using the various display options:*

To display...	Press the...
◆ Both teletext information and the normal broadcast	<b>TTX/MIX</b>
◆ Hidden text (answers to quiz games, for example)	E3 (reveal)
◆ The normal screen	E3 (reveal) again
◆ A secondary page, by entering its 4-digit number	<b>SUBPAGE</b> (E9)
◆ The next page	E1 (page up)
◆ The previous page	E5 (page down)
◆ Double-size letters in the: • Upper half of the screen • Lower half of the screen	<b>SIZE</b> (E9) • Once • Twice
◆ Normal screen	• Three times

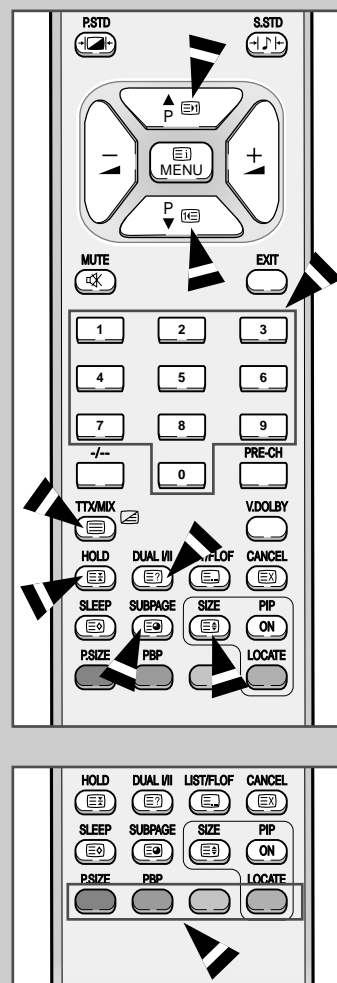


## Using FLOF to Select a Page

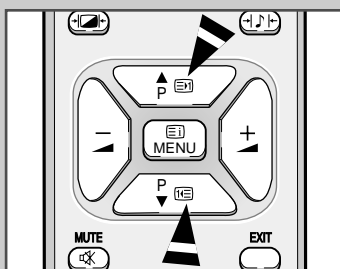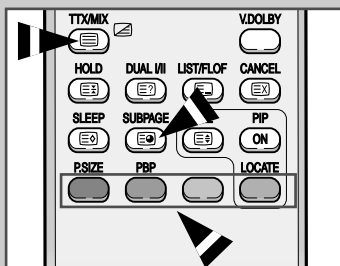

*The various topics included in the teletext pages are color-coded, and can be selected by pressing the colored buttons on the remote control.*

- 1 Display the teletext contents page by pressing the **TTX/MIX** button.
- 2 Press the coloured button corresponding to the topic that you wish to select; the available topics are given on the status line.  
**Result:** The page is displayed with other coloured information that can be selected in the same way.
- 3 To display the previous or next page, press the corresponding coloured button.
- 4 To display the subpage, see the following steps.
  - ◆ Press the **SUBPAGE** (P) button.  
**Result:** The available subpages appear.
  - ◆ Select the required sub-page. Sub-pages can be scrolled by using the (P) (P) or (P) (P) button.

## Storing Teletext Pages

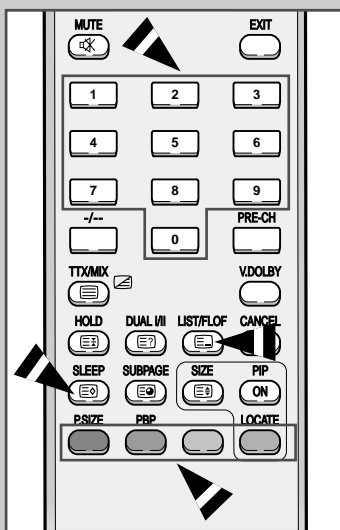

*You can store up to four teletext pages to display them later at leisure.*

- 1 Select the LIST mode using the **LIST/FLOF** (P) button.  
**Result:** Four 3-digit numbers are displayed in different colors.  
➤ The **LIST/FLOF** (P) button is used to switch between the LIST and FLOF modes.
- 2 Press the colored button corresponding to the page that will be replaced.
- 3 Enter the new page number using the numeric buttons.
- 4 Repeat steps 2 and 3 for each page to be stored, using a different colored button each time.
- 5 Press the (P) (store) button until the corresponding blocks blink.



## Troubleshooting: Before Contacting Service Personnel

**Before contacting Samsung after-sales service, perform the following simple checks.**  
**If you cannot solve the problem using the instructions below, note the model and serial number of your set and contact your local dealer.**

No sound or picture	<ul style="list-style-type: none"> <li>◆ Check that the mains lead has been connected to a wall socket.</li> <li>◆ Check that you have pressed the <b>Power</b> (⏻) button.</li> <li>◆ Check the picture contrast and brightness settings.</li> <li>◆ Check the volume.</li> </ul>
Normal picture but no sound	<ul style="list-style-type: none"> <li>◆ Check the volume.</li> <li>◆ Check whether the <b>MUTE</b> button has been pressed on the remote control.</li> </ul>
No picture or black and white picture	<ul style="list-style-type: none"> <li>◆ Adjust the color settings.</li> <li>◆ Check that the broadcast system selected is correct.</li> </ul>
Sound and picture interference	<ul style="list-style-type: none"> <li>◆ Try to identify the electrical appliance that is affecting the set and move it further away.</li> <li>◆ Plug your set into a different mains socket.</li> </ul>
Blurred or snowy picture, distorted sound	<ul style="list-style-type: none"> <li>◆ Check the direction, location and connections of your aerial. This interference is often due to the use of an indoor aerial.</li> </ul>
Remote control malfunctions	<ul style="list-style-type: none"> <li>◆ Replace the remote control batteries.</li> <li>◆ Clean the upper edge of the remote control (transmission window).</li> <li>◆ Check the battery terminals.</li> </ul>
"Check Signal Cable" message is displayed.	<ul style="list-style-type: none"> <li>◆ Check that the signal cable is firmly connected to the PC or video sources.</li> <li>◆ Check that the PC or video sources are turned on.</li> </ul>
On PC mode, "Not Supported Mode" message is displayed.	<ul style="list-style-type: none"> <li>◆ Check the maximum resolution and the frequency of the video Adapter.</li> <li>◆ Compare these values with the data in the Display Modes Timing Chart.</li> </ul>
On PC mode, horizontal or vertical bars appear to flicker, jitter or shimmer on the image.	<ul style="list-style-type: none"> <li>◆ Adjust the Coarse or Fine function.</li> </ul>
On PC mode, screen is black and power indicator light is steady amber or blinks every 0.5 or 1 seconds	<ul style="list-style-type: none"> <li>◆ The TV is using its power management system.</li> <li>◆ Move the computer's mouse or press a key on the keyboard.</li> </ul>
On PC mode, image is not stable and may appear to vibrate.	<ul style="list-style-type: none"> <li>◆ Check that the display resolution and frequency from your computer or video board is an available mode for your set. On your computer check: Control Panel, Display, Settings.</li> <li>◆ If the setting is not correct, use your computer utility programme to change the display settings.</li> </ul> <p>➤ Your set supports multiscan display functions within the following frequency domain:  <b>Horizontal frequency:</b> 30 ~ 85 kHz  <b>Vertical frequency:</b> 55 ~ 85 Hz</p>
On PC mode, image is not centered on the screen.	<ul style="list-style-type: none"> <li>◆ Adjust the horizontal and vertical position.</li> </ul>
You need the Monitor driver software.	<ul style="list-style-type: none"> <li>◆ Download the driver from WWW pages:  <a href="http://www.samsungusa.com/monitor">http://www.samsungusa.com/monitor</a>  <a href="http://www.samsung-monitor.com">http://www.samsung-monitor.com</a> </li> </ul>

## Technical and Environmental Specifications

Model	SyncMaster 211MP	SyncMaster 241MP
<b>Panel</b>		
Size	21.3" Diagonal	24.06" Diagonal
Display Size	432(H) x 324(V) mm	518.4(H) x 324(V) mm
Type	a-si TFT active matrix	
Pixel Pitch	0.27 (H) x 0.27 (V) mm	
Viewing Angle	80/80/80/80 (L/R/T/B)	
<b>Frequency</b>		
Horizontal	30 ~ 85 kHz	
Vertical	55 ~ 85 Hz	
Display Color	16,777,216 colors	
<b>Display Resolution</b>		
Maximum Mode	1600 x 1200 @ 60 Hz	1920 x 1200 @ 60 Hz
<b>Input Signal</b>		
Sync.	H/V Separate, TTL, P. or N. H/V Composite, TTL, P. or N. Sync-on-green 0.3 Vp-p, N. 0.7 Vp-p @ 75 ohm	
Video Signal		
<b>TV/Video</b>		
Color System	PAL, SECAM, NTSC4.43	
Sound System	B/G, D/K, I, L, L'	
Video Format	CVBS, S-VHS	
<b>Scart</b>		
Video Input/Output	1.0 Vp-p @ 75 ohm	
RGB Input	0.7 Vp-p @ 75 ohm	
Audio Input/Output	500mVrms	
<b>Color system</b>		
	PAL	
<b>Power Supply</b>		
Input	100 - 240 V (50Hz / 60Hz)	
Output	DC 14V/8A	
<b>Power Consumption</b>		
Maximum	110 W	120 W
Power Saving	< 8 W	
<b>Dimensions (W X D X H)</b>		
Monitor body	531.5 x 67.5 x 422	618 x 67.5 x 422
With stand	578.7 x 218.2 x 472	665.2 x 218.2 x 472
<b>Environmental Considerations</b>		
Operating Temperature	50 °F to 104 °F (10 °C to 40 °C)	
Operating Humidity	10% to 80%	
Storage Temperature	- 13 °F to 113 °F (-25 °C to 45 °C)	
Storage Humidity	5% to 95%	
<b>Audio Characteristics</b>		
Audio Input	RCA Jack (L, R), 0.5Vrms (-9dB)	
Audio Input (PC)	3.5Ø Stereo Jack, 0.5Vrms (-9dB)	
Audio Output	RCA Jack (L, R), 0.5Vrms (-9dB)	
Speaker Output	Max. 5W Output (3.5Ø Stereo Jack, 2)	
Headphone Output	Max. 10mW Output (3.5Ø Stereo Jack, 32Ω)	
Frequency	RF: 80Hz ~ 15kHz (at- 3dB)	
Response	A/V: 80Hz ~ 20kHz (at- 3dB)	



# MAN HÌNH LCD

SyncMaster 211MP



SyncMaster 241MP

## Tài liệu Hướng dẫn Sử dụng


Trước khi sử dụng máy, nên đọc kỹ tài liệu hướng dẫn sử dụng này và lưu lại để tham khảo về sau.

DANH MỤC CHỨC NĂNG TRÊN MÀN HÌNH  
MÀN HÌNH PC  
CHỨC NĂNG MÀN HÌNH CON (PIP)  
CHỨC NĂNG NHIỀU MÀN HÌNH (PBP)  
DỊCH VỤ TELETEXT

## Cảnh báo

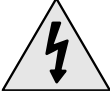	<b>Cảnh báo</b> NGUY CƠ SỐC ĐIỆN, KHÔNG NƯỚC MÔI	
<b>Cảnh báo:</b> NEI TRÁNH BỊ SỐC ĐIỆN, KHÔNG NƯỚC MÔI VÀO SAU CỬA MÁY. BÊN TRONG KHÔNG CỎI PHẢI NẤU NGỒO SÔI DÙNG CỎI THEO THAO TÁC. HÃY LIÊN HỆ NHÂN VIÊN BẢO TRÌ CỎI CHUYÊN MÔN.		

 Hình tam giác chứa tia chớp và  
 dấu mũi tên là biểu tượng cảnh  
 báo bản vẽ "mức điện thế nguy  
 hiểm" bên trong sản phẩm này.



Hình tam giác chứa dấu chấm  
 than là biểu tượng cảnh báo  
 bản vẽ hướng dẫn quan  
 trọng cho sản phẩm.




**CẢNH BÁO:** CẢNH BÁO: NEI TRÁNH THIẾT HẠI CỎI THEO GÂY CHẤM HOẶC SỐC ĐIỆN, KHÔNG  
 NÊN NEI MÁY NGOÀI TRỜI MÙA HOẶC NỘI ÁM ƯỚT.

 **Nhiệm vụ chính nước thể hiện ở phía sau máy và tần số dòng điện là 50 hoặc 60Hz.**



## Cải thiện độ bền của sản phẩm

Các hình minh họa dưới đây tổng hợp cho những tình huống cảnh báo trước khi sử dụng máy thu hình (TV) của bạn.

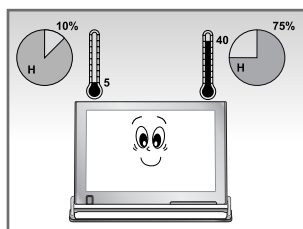



❗ **KHÔNG** để TV trong môi trường nhiệt độ quá nóng hoặc quá lạnh.

KHÔNG nên đặt TV dưới ánh sáng mặt trời chiếu trực tiếp. ▶

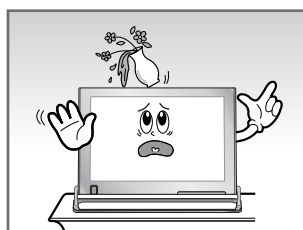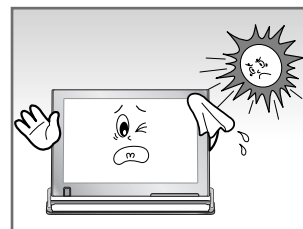



❗ Không nên để TV tiếp xúc với bất kỳ loại chất lỏng nào.

Nếu TV bị rơi không nên tự ý sửa chữa. Hãy liên hệ với nhân viên bảo trì chuyên môn. ▶

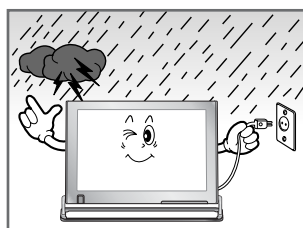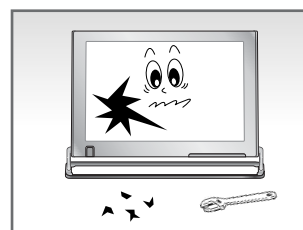



❗ Khi trời mưa, bão (hoặc bất kỳ khi nào có mưa), hãy rút phích cắm của TV ra khỏi nguồn điện ngay lập tức.

Hãy để các bộ tiếp hợp điện xa nhau. Vì có thể có nguy cơ gây cháy. ▶

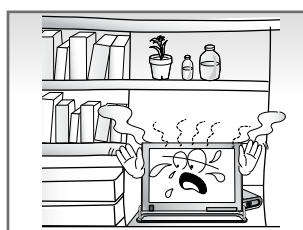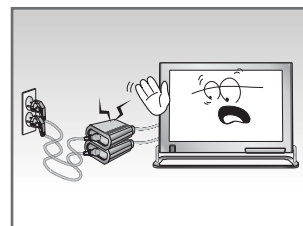


❗ Luôn giữ các bộ tiếp hợp điện ở nơi thông thoáng.

Giữ bộ sạc và bộ tiếp hợp điện ở nơi thông thoáng trước khi sử dụng. Vì có thể có nguy cơ gây cháy. ▶

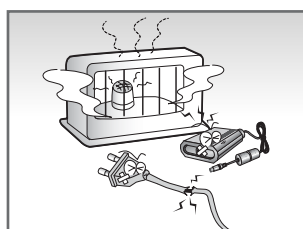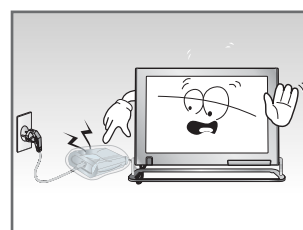

❗ Giữ các bộ tiếp hợp điện tránh xa mọi nguồn nhiệt khác. Vì có thể có nguy cơ gây cháy.

Nếu bạn không sử dụng bộ sạc trong thời gian dài, hãy tháo pin và bộ sạc ra khỏi nơi thông thoáng. ▶

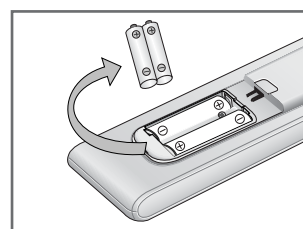

**SẢN PHẨM NÀY KHÔNG THÍCH HỢP SỬ DỤNG TRONG MÔI TRƯỜNG SẢN XUẤT CÔNG NGHIỆP**

## Mục lục

<b>◆ LỜI NÓI ĐẦU</b>	
■ Cảnh báo .....	2
■ Hướng dẫn sử dụng an toàn .....	3
<b>◆ KẾT NỐI VÀ CHUẨN BỊ TV/MÀN HÌNH</b>	
■ Tìm hiểu bảng điều khiển .....	6
■ Lắp đặt trên Tổng .....	7
■ Xem bảng kết nối .....	8
– Kết nối với anten hoặc mạng truyền hình cáp .....	9
– Kết nối với máy tính .....	9
– Kết nối với bộ DTV SET-TOP BOX, thiết bị VCR hoặc đầu DVD .....	10
– Kết nối với các Thiết bị A/V khác .....	10
– Kết nối với loa gắn ngoài .....	10
– Kết nối với loa .....	10
■ Xem hình ảnh từ những nguồn bên ngoài .....	11
■ Tìm hiểu bộ điều khiển từ xa .....	12
(Tại các chức năng trò chơi chức năng Teletext) .....	
■ Tìm hiểu bộ điều khiển từ xa (Những chức năng Teletext) .....	13
■ Lắp pin vào bộ điều khiển từ xa .....	14
■ Cách bắt sóng TV .....	14
■ Làm quen sử dụng bộ điều khiển từ xa .....	15
■ Chọn ngôn ngữ .....	16
<b>◆ CÀI ĐẶT KÊNH</b>	
■ Lưu kênh tới nhãng .....	17
■ Lưu kênh thu công .....	18
■ Đặt tên cho các kênh .....	19
■ Bỏ qua các kênh không muốn xem .....	20
■ Tính chỉnh bắt sóng kênh .....	20
■ Sắp xếp các kênh đã lưu .....	21
<b>◆ SỬ DỤNG NHỮNG CHỨC NĂNG KHÁC</b>	
■ Thay đổi chuẩn hình ảnh .....	22
■ Điều chỉnh các thông số hình ảnh .....	22
■ Chọn dạng hình ảnh .....	23
■ Cách làm nóng hình .....	23
■ Thay đổi chuẩn âm thanh .....	24
■ Điều chỉnh các thông số âm thanh .....	24
■ Thông thức âm thanh vòm (Dolby) .....	25

## Mục lục

◆ SỬ DỤNG NHỮNG CHỨC NĂNG KHÁC	
■ Bật/Tắt loa tích hợp.....	25
■ Chọn chức năng MTS (Multichannel Television Stereo) .....	26
■ Bật chức năng Màn hình con (PIP).....	27
■ Bật chức năng Nhiều màn hình (PBP- Màn hình nổi) .....	28
■ Chức năng tối ưu hóa âm thanh.....	29
■ Chức năng hiển thị thông tin.....	29
◆ SỬ DỤNG CÁC CHỨC NĂNG PC	
■ Nhiều kênh nổi sáng và nổi tối đồng phân.....	30
■ Chọn kích cỡ hình ảnh.....	30
■ Nhiều kênh chất lượng hình ảnh.....	31
■ Thay đổi vị trí hình ảnh.....	31
■ Nhiều kênh màu.....	32
■ Cài đặt lại giá trị góc các thông số hình ảnh.....	32
■ Các chế độ hiển thị.....	33
■ Chức năng tiết kiệm điện.....	33
◆ CÁCH SỬ DỤNG CHỨC NĂNG TELETEXT	
■ Chức năng Teletext.....	34
■ Hiện thị thông tin teletext.....	34
■ Chọn một trang bảng số.....	35
■ Cách dùng FLOF để chọn một trang.....	36
■ Lướt qua các trang teletext.....	36
◆ LỜI KHUYÊN KHI SỬ DỤNG	
■ Khắc phục sự cố Trước khi liên hệ nhân viên bảo trì.....	37
■ Các thông số kỹ thuật và môi trường.....	38
■ Cách nối dây nối cam kết (chỉ dành cho khu vực Anh quốc).....	39

Các ký hiệu



Nhấn





Quan trọng



Lưu ý

## Tìm hiểu Bảng điều khiển

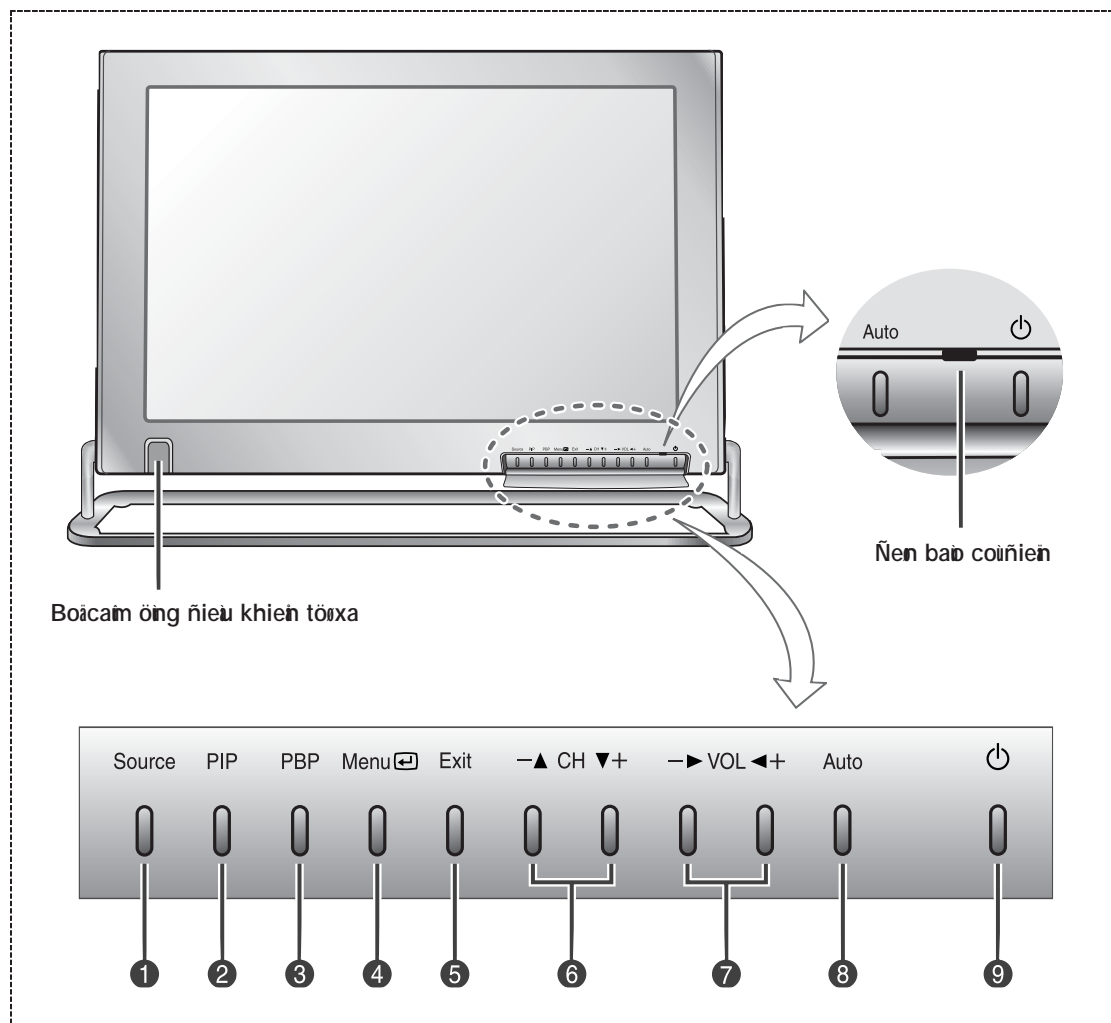

- ❶ **Nguồn**  
Hiện thị danh mục tất cả các thiết bị đầu vào hiện có (TV/Video/S-Video/DVD/DTV/PC).
- ❷ **PIP**  
Kích hoạt chức năng PIP (Màn hình con).
- ❸ **PBP**  
Kích hoạt chức năng PBP (Màn hình nội).
- ❹ **Danh mục**   
Mở OSD (Hiện thị trên màn hình) và chọn một chức năng.
- ❺ **Thoát**  
Thoát khỏi danh mục trên màn hình.
- ❻ **-▲ CH ▼+**  
Di chuyển thành sáng chọn lên hoặc xuống trên màn hình.
- ❼ **▶ VOL ◀+**  
Di chuyển thành sáng chọn qua trái hoặc phải trên màn hình. Tăng hoặc giảm mức âm lượng và giá trị của chức năng nổi chọn.
- ❽ **Auto**  
Cho phép bạn cài nhận chất lượng của hình ảnh đang hiện thị. Cài thông số về âm lượng, thời gian và vị trí nổi của kênh tivi đang. (Chỉ hoạt động ở chế độ PC)
- ❾ **⏻ (Nền)**  
Bật/Tắt màn hình.



## Cách lắp đặt trên tường

### 1 **Tháo chân đế**

Dùng vít 6 cạnh để tháo chân đế.

### 2 **Gõ các miếng cao su**





Gõ 4 miếng cao su ở các cạnh ra.

### 3 **Gắn lên tường**

Gắn chân đế lên tường bằng ốc vít hoặc đinh.

### 4 **Lắp màn hình**


Dùng vít 6 cạnh để lắp màn hình vào chân đế.

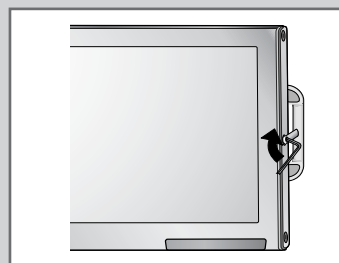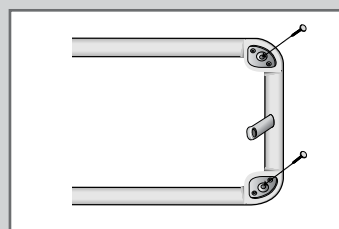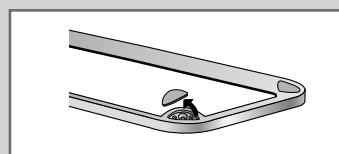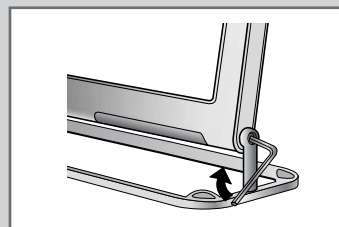

### **Lưu ý khi lắp đặt**

- ◆ Không lắp đặt màn hình lên bất kỳ nội nào khác ngoài tường thẳng đứng.
- ◆ Nếu bạn muốn nâng hoặc hạ màn hình vào hoặc ra khỏi vị trí treo, hãy làm theo những hướng dẫn sau:
  - Không lắp đặt màn hình khi bên máy bị nóng hoặc đang chạy.
  - Không lắp đặt màn hình ở nơi phải chịu nhiễu động hoặc nhiệt độ cao.
  - Không lắp đặt màn hình trong tường.
  - Không lắp đặt màn hình gần hoặc xung quanh các thiết bị tỏa nhiệt.
- ◆ Chỉ sử dụng các thanh phản và bộ phận nối chuyên dụng.

## Tìm hiểu Bảng kết nối

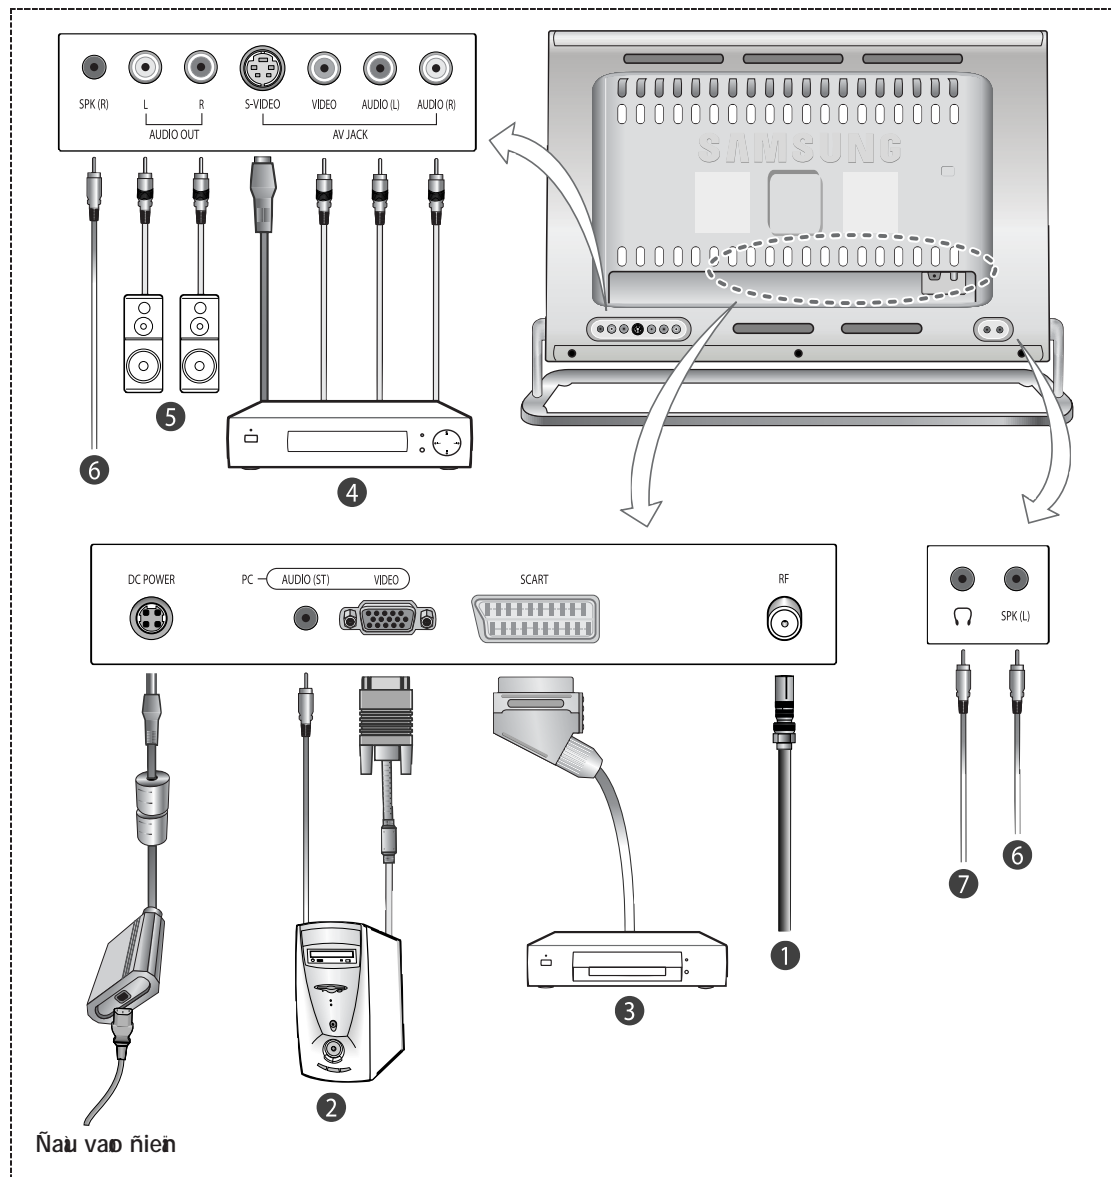

Bat cõu khi nào bạn kết nối mới hệ thống âm thanh hoặc hình ảnh vào màn hình, nhõu la trõc hẽ phải tắt mọi thiết bị. Tham khảo tài liệu kèm theo thiết bị nhõu nhõc hõng danh chi tiết về kết nối và biết nhõu nhõc cảnh báo an toàn liên quan.

## Tìm hiểu Bảng kết nối (tiếp theo)

### ❶ Cách kết nối với anten hoặc mạng truyền hình cáp (tùy theo kiểu màn hình)

Nếu có thể xem được các kênh TV, máy thu hình phải nhận được tín hiệu từ một trong những nguồn sau:

 
- Anten trời
- Mạng truyền hình cáp
- Mạng truyền hình vệ tinh

### ❷ Kết nối với máy tính

- Cắm đầu cắm D-SUB 15 chân vào cổng PC Video.
- Cắm một đầu của dây âm thanh nối vào cổng "Audio(ST)" ở mặt sau của màn hình và đầu kia vào cổng "Audio Out" của card âm thanh trong máy tính.
- Nếu cần thiết, hãy cài đặt trình điều khiển màn hình có trong CD kèm theo. Muốn biết thêm chi tiết, hãy tham khảo hướng dẫn cài đặt trình điều khiển kèm theo hộp đựng CD.

#### ➤ Đầu cắm D-SUB 15 chân

Chân cắm	H/V riêng lẻ	H/V tổng hợp	Ngang bo tín hiệu xanh
1	Nội (R)	Nội (R)	Nội (R)
2	Xanh (G)	Xanh (G)	Xanh (G) + Ngang/Độc ngang bo
3	Xanh đồng (B)	Xanh đồng (B)	Xanh đồng (B)
4	Tiếp đất	Tiếp đất	Tiếp đất
5	Tiếp đất (DDC)	Tiếp đất (DDC)	Tiếp đất (DDC)
6	Nội (R) Tiếp đất	Nội (R) Tiếp đất	Nội (R) Tiếp đất
7	Xanh (G) Tiếp đất	Xanh (G) Tiếp đất	Xanh (G) Tiếp đất
8	Xanh đồng (B) Tiếp đất	Xanh đồng (B) Tiếp đất	Xanh đồng (B) Tiếp đất
9	Không kết nối	Không kết nối	Không sử dụng
10	Ngang bo tiếp đất	Ngang bo tiếp đất	Ngang bo tiếp đất
11	Tiếp đất	Tiếp đất	Tiếp đất
12	Độc liệu (DDC)	Độc liệu (DDC)	Độc liệu (DDC)
13	Ngang bo ngang	Ngang bo ngang/độc	Không sử dụng
14	Ngang bo độc	Không sử dụng	Không sử dụng
15	Ngang bo (DDC)	Ngang bo (DDC)	Ngang bo (DDC)



## Tìm hiểu Bảng kết nối

### 3 Kết nối với bộ DTV SET-TOP BOX, thiết bị VCR hoặc đầu DVD

- Cắm dây SCART của các thiết bị DTV, VCR hoặc DVD vào cổng SCART trên các thiết bị nối.
- Nếu muốn kết nối cả 2 thiết bị DTV Set-Top Box và VCR (hoặc DVD), bạn phải kết nối thiết bị DTV vào thiết bị VCR (hoặc DVD) trước, sau đó kết nối thiết bị VCR (hoặc DVD) vào màn hình.

### 4 Kết nối với các thiết bị A/V khác


- Cắm dây RCA hoặc S-Video vào một thiết bị A/V khác tổng thích nhờ VCR, DVD hoặc máy quay phim.
- Cắm một đầu của các dây âm thanh RCA vào cổng "AUDIO(L)" và "AUDIO(R)" ôi mặt sau của màn hình và cắm đầu kia vào cổng âm thanh tổng hợp trên thiết bị A/V.
- Bạn có thể cắm headphone vào cổng headphone (🔊) ôi mặt sau của màn hình. Trong khi headphone đang hoạt động, bạn sẽ không nghe được âm thanh từ loa tích hợp.

### 5 Kết nối với loa gắn ngoài

Cắm các dây âm thanh RCA vào bộ loa gắn ngoài có tích hợp sẵn bộ khuếch đại (nếu cần thiết để khuếch đại âm thanh với loa).

0


### 6 Kết nối với loa (Kết nối với loa (tùy kiểu màn hình))

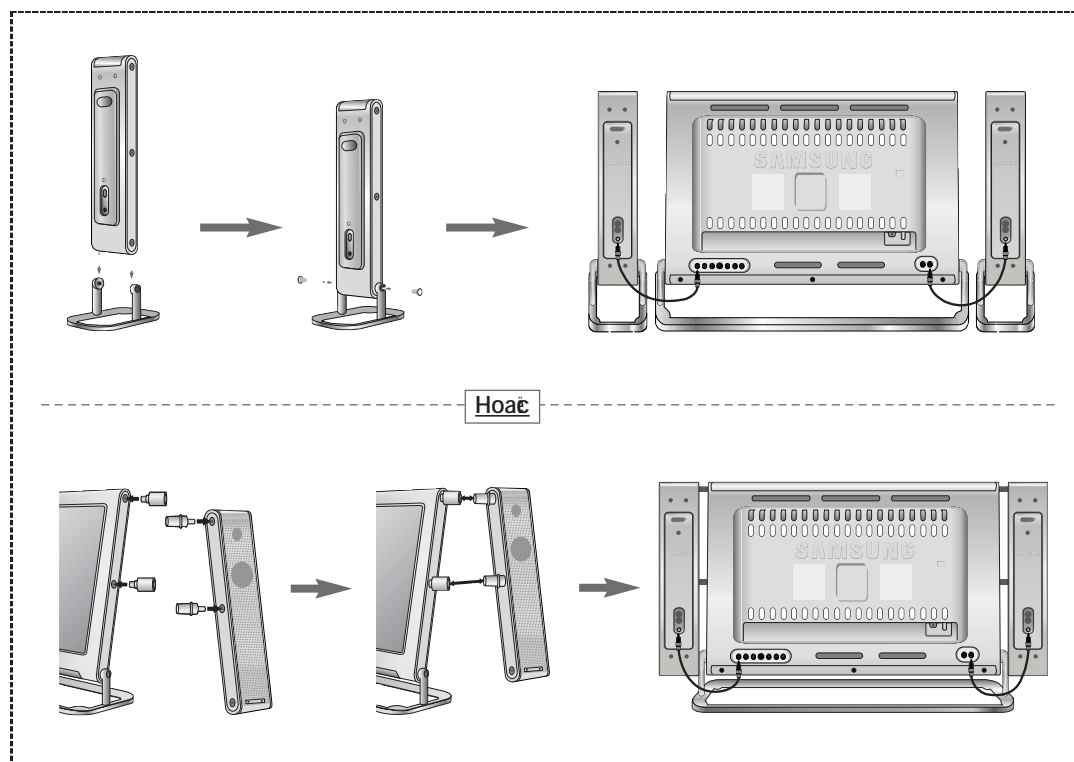


## Xem hình ảnh từ các nguồn bên ngoài

*Mỗi khi cần kết nối vào các hệ thống Audio/Video, bạn có thể xem hình ảnh từ các nguồn khác nhau bằng cách chọn những nguồn vào tổng cộng.*

- 1 Kiểm tra xem tại các kết nối cần thiết nếu có nút chọn (tham khảo trang 8 và 9 để biết thêm chi tiết).
- 2 Bật màn hình và nếu cần thiết, hãy bấm nút **SOURCE** nhiều lần. Các loại đầu vào được hiển thị theo thứ tự sau:  
**Ant (TV) – Scart – Video – S-Video – PC.**

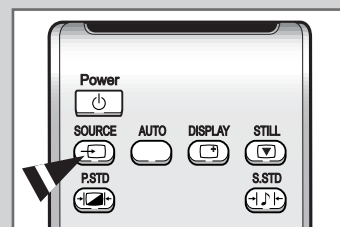


## Tìm hiểu bộ điều khiển từ xa (Tại các nút chức năng trên chức năng Teletext)

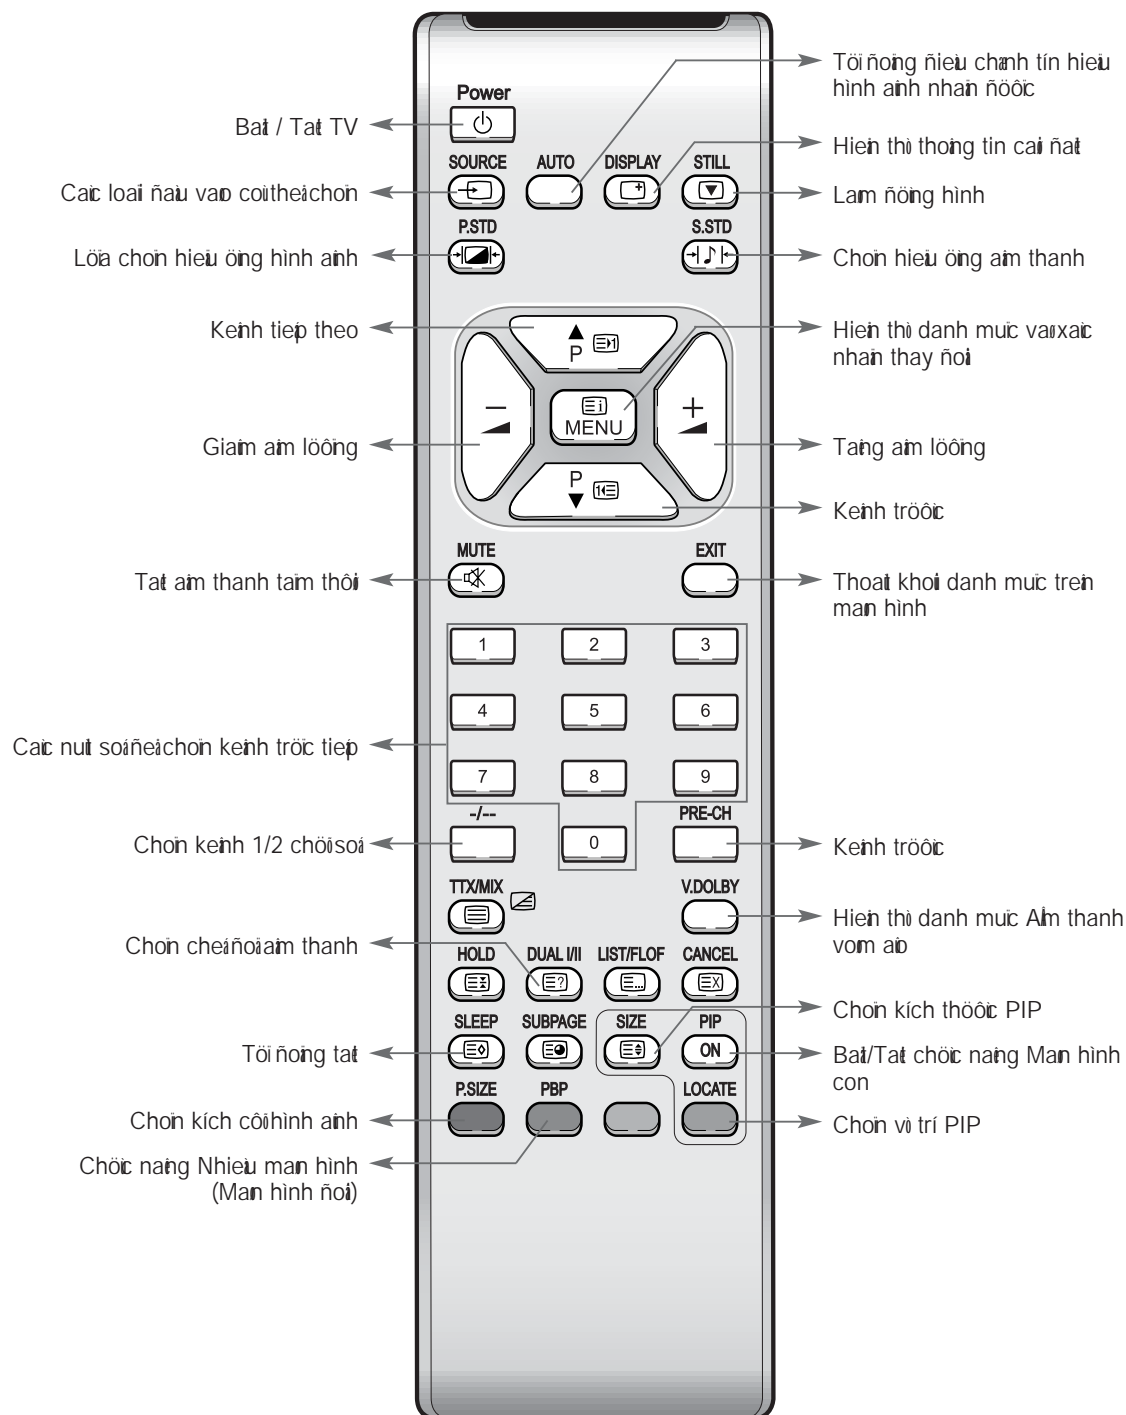


➤ Hoạt động của bộ điều khiển từ xa có thể bị ảnh hưởng bởi ánh sáng chói.

## Tìm hiểu biểu tượng khiển tòxxa (Các chức năng Teletext)

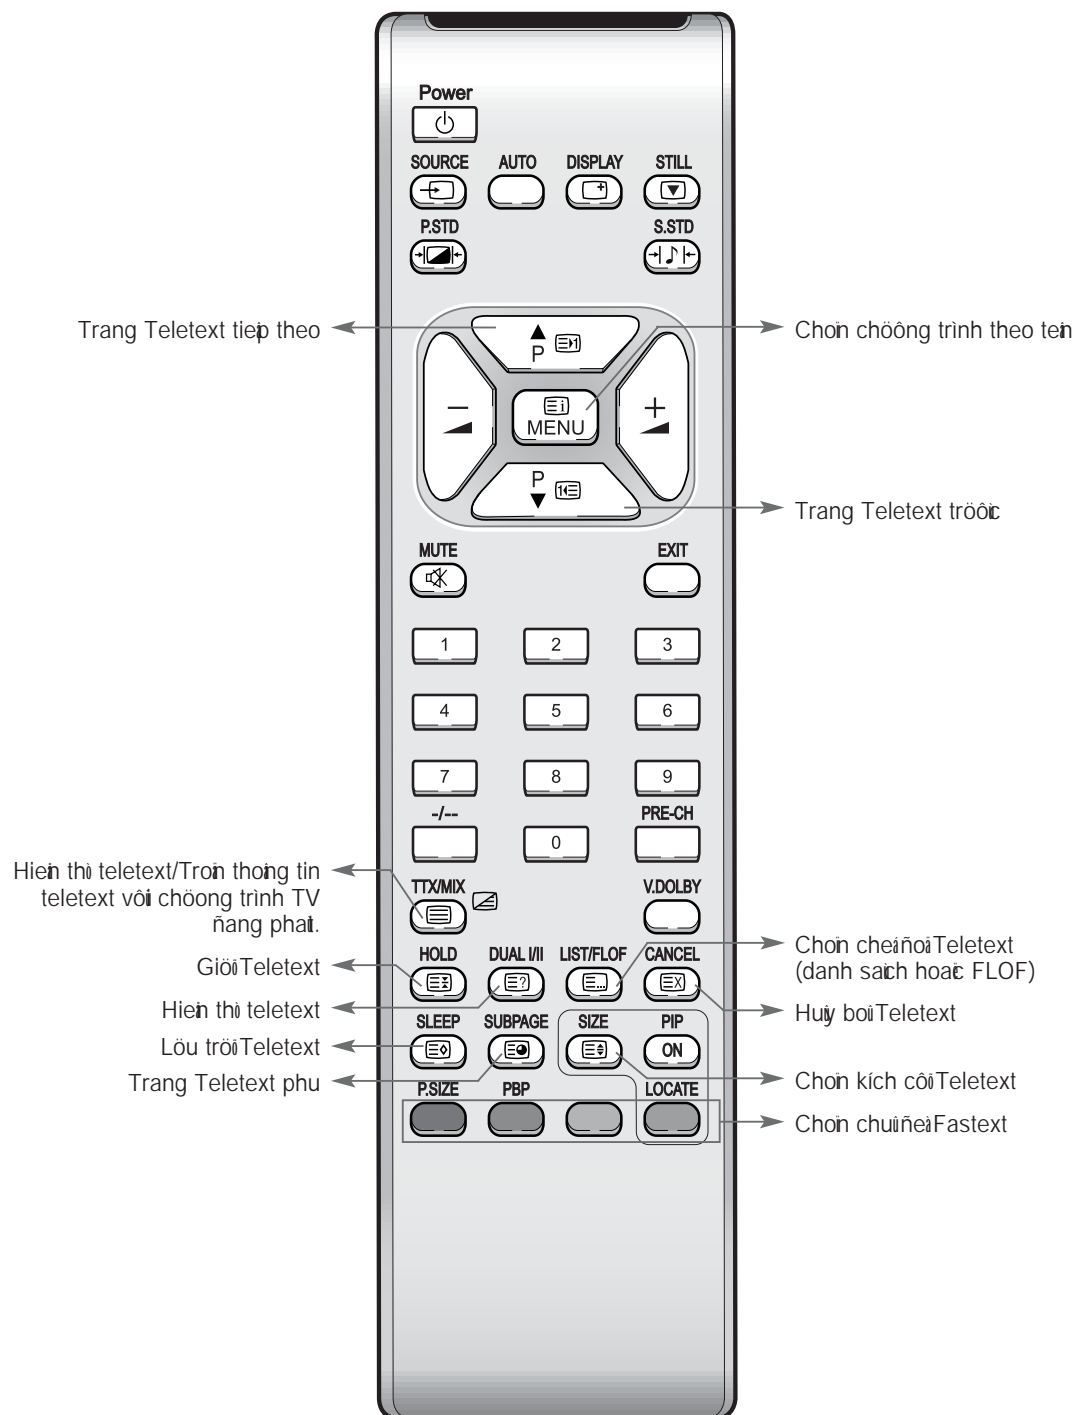

## Lắp pin vào bộ điều khiển từ xa

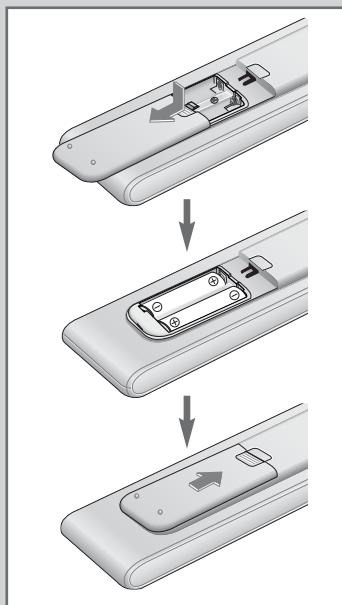



**Bạn phải lắp pin hoặc thay pin cho bộ điều khiển từ xa khi bạn:**

- ◆ **Mua TV**
- ◆ **Nhận thấy bộ điều khiển từ xa không còn hoạt động bình thường.**

- 1 Mở nắp sau của bộ điều khiển từ xa bằng cách nhấn biểu tượng tổng chế xuống và sau đó nhấc nhanh theo hướng mũi tên.
- 2 Lắp hai pin 1,5V loại R03, UM4, "AAA" hoặc tổng cộng vào chuỗi lắp theo hướng các cọc:
  - ◆ cọc + trên pin nối với cọc + trên bộ điều khiển từ xa
  - ◆ cọc - trên pin nối với cọc - trên bộ điều khiển từ xa
- 3 Đóng nắp bằng cách lật nó thành hàng với khe trên bộ điều khiển từ xa và nhấn nó vào lại vị trí.

➤ Không nên dùng chung nhiều loại pin khác nhau, ví dụ: loại kiềm và loại mangan.

## Cách bật và tắt TV

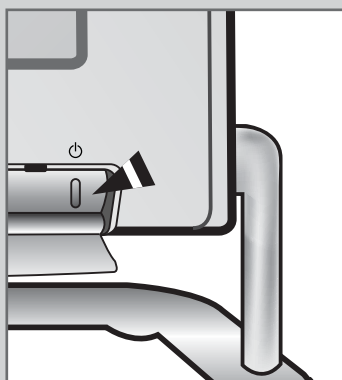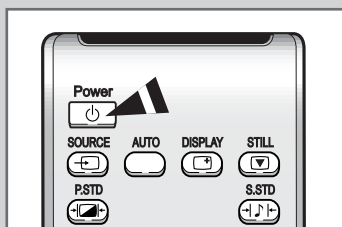

**Đặt dây điện nối các phía sau màn hình TV.**

➤ Nếu bạn mua màn hình này ở Anh Quốc, hãy xem trang 39 để biết thêm hướng dẫn về việc lắp đặt dây điện.

Cắm dây điện vào một ổ cắm thích hợp.

**Kết quả:** Màn hình hoặc bật lên và hiện báo Standby (chờ) màu xanh phía trước màn hình sẽ phát sáng.

**Bấm nút để tắt màn hình TV ở chế độ chờ (Standby) để tiết kiệm điện. Chế độ chờ có thể hữu dụng khi bạn muốn ngừng xem TV tạm thời (ví dụ: trong bữa ăn).**



- 1 Nhấn nút **Power** (⏻) trên bộ điều khiển từ xa hoặc ở mặt trước màn hình.  
**Kết quả:** Màn hình sẽ tắt và hiện báo Standby (chờ) màu xanh phía trước màn hình sẽ tắt.
- 2 Để tắt lại TV, chỉ cần nhấn nút **Power** (⏻) lần nữa.

➤ Không nên để TV ở chế độ chờ trong khoảng thời gian dài (ví dụ: khi bạn đi ngủ). Hãy tắt hẳn màn hình bằng cách rút dây điện và ngắt nguồn ra.





## Chọn ngôn ngữ

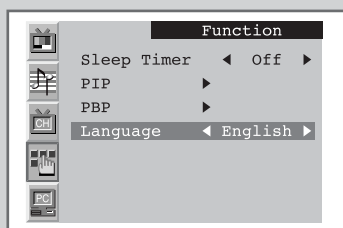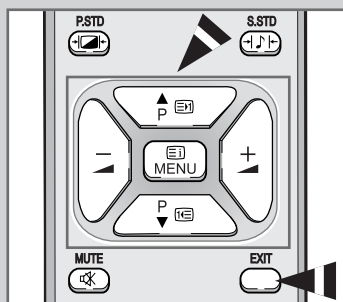

*Khi bạn sử dụng TV lần đầu, bạn phải chọn ngôn ngữ để hiển thị danh mục và các thông báo (chữ số).*

- 1 Nhấn nút **MENU**.  
Kết quả Danh mục chính sẽ hiển thị.
- 2 Nhấn nút **P▼** hoặc **P▲** để chọn mục **Function**.  
Kết quả Các tùy chọn có trong mục **Function** sẽ hiển thị.
- 3 Nhấn nút **◀** - hoặc **▶**.
- 4 Nhấn **P▼** hoặc nút **P▲** để chọn mục **Language**.
- 5 Chọn một ngôn ngữ cuối theo cách nhấn nút **◀** - hoặc **▶** + nhiều lần.
- 6 Khi đã chọn xong ngôn ngữ bạn muốn, nhấn nút **EXIT** để trở lại chế độ màn hình bình thường.

## Lưu kênh tivi

*Bạn có thể quét vùng tần số có các đường ôi khu vực của bạn (nếu nay con phụ thuộc vào nước bạn). Các số hiệu chương trình hoặc lưu tivi không có thể không tổng cộng với số hiệu của số hoặc số hiệu mong muốn của chương trình rồi. Tuy nhiên, bạn có thể sắp xếp các số hiệu bằng tay và xóa bất cứ kênh nào bạn không muốn xem.*

- 1 Nhấn nút **MENU**.

Kết quả Danh mục chính sẽ hiện thị.

- 2 Nhấn nút **P▼** hoặc **P▲** để chọn mục **Channel**.

Kết quả Các mục lựa chọn trong nhóm **Channel** sẽ hiện thị.

- 3 Nhấn nút **◀ -** hoặc **▶ +**.

Kết quả Mục **Auto Store** sẽ được chọn.

- 4 Nhấn nút **◀ -** hoặc **▶ +** lần nữa.

Kết quả Các mục lựa chọn trong nhóm **Auto store** sẽ hiện thị cùng với mục **Country** được chọn.

- 5 Nhấn nút **◀ -** hoặc **▶ +** nhiều lần để chọn nước của bạn. Bạn có thể chọn những nước sau:  
**Belgie - Deutschland - Espania - France - Italia - Nederland - Schweiz - Sverige - UK - East Europe.**

 

- 6 Nhấn nút **P▼** hoặc **P▲** để chọn mục **Search**, sau đó nhấn nút **◀ -** hoặc **▶ +**.

Kết quả Quá trình quét sẽ tivi kết thúc. Các kênh được sắp xếp và lưu theo thời gian tổng cộng của chúng trong vùng tần số (vùng tần số thấp nhất sẽ tivi đầu, và vùng tần số cao nhất sẽ tivi cuối). Chương trình được chọn bạn đầu sẽ hiện thị.








➤ Muốn ngừng quá trình dò kênh trước khi nó kết thúc, hãy nhấn nút **EXIT**.

- 7 Khi các kênh đã được lưu, bạn có thể thực hiện các thao tác sau:

- ◆ Đặt kênh
- ◆ Đặt tên cho các kênh đã lưu (xem trang 19)
- ◆ Xóa kênh (xem trang 20)
- ◆ Tính chính xác lỗi thu kênh nếu cần thiết (xem trang 20).
- ◆ Sắp xếp chúng theo thời gian yêu cầu (xem trang 21)

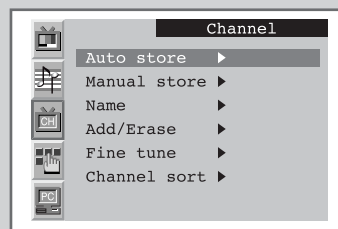

## Lưu kênh thu công

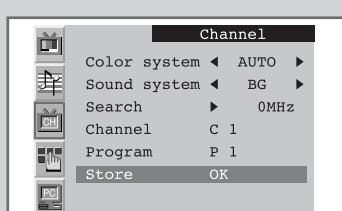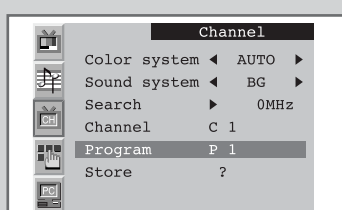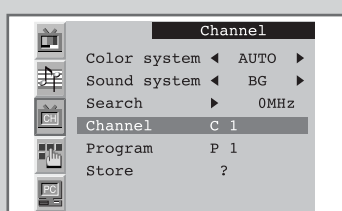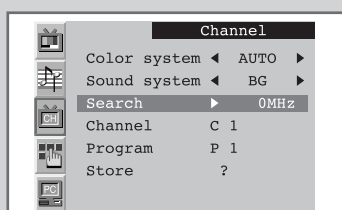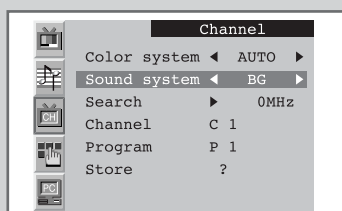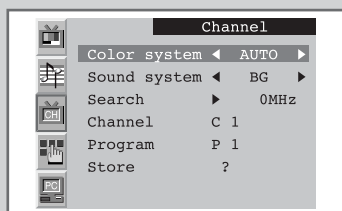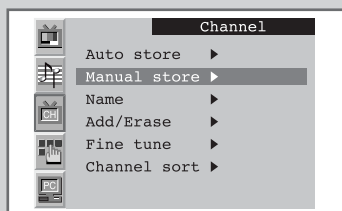

Tiếng Việt-18

*Bạn có thể lưu tới 100 kênh TV, kể cả các kênh truyền hình cáp. Khi bạn lưu kênh thu công, bạn có các lựa chọn sau:*

- ◆ *Có lưu mỗi kênh đơn độc hay không*
- ◆ *Số hiệu chương trình mà bạn muốn gán cho mỗi kênh độc lập.*

1 Nhấn nút MENU.

Kết quả Danh mục chính sẽ hiện thị.

2 Nhấn nút P▼ hoặc P▲ để chọn mục Channel.

Kết quả Các mục lựa chọn trong nhóm Channel sẽ hiện thị.

3 Nhấn nút ◀ - hoặc ▶ +.

4 Nhấn nút P▼ hoặc P▲ để chọn mục Manual store. Nhấn nút ◀ - hoặc ▶ + lần nữa.

Kết quả Các tùy chọn có trong mục Manual store sẽ hiện thị cùng với mục Color System độc lập.

5 Nếu cần, bạn có thể xác định chuẩn phát sóng cần thiết bằng cách nhấn nút ◀ - hoặc ▶ + nhiều lần.

Kết quả Những chuẩn màu sẽ hiện thị theo thứ tự sau:  
AUTO – PAL – SECAM – NT4.43.

6 Nhấn nút P▼ hoặc P▲ để chọn mục Sound system. Bạn có thể xác định chuẩn âm thanh cần thiết bằng cách nhấn nút ◀ - hoặc ▶ + nhiều lần.

Kết quả Các chuẩn âm thanh sẽ hiện thị theo thứ tự sau:  
BG – DK – I – L.

7 Nếu bạn biết số hiệu kênh sẽ độc lập, nhấn nút P▼ hoặc P▲ để chọn mục Channel. Bạn có thể xác định chuẩn âm thanh cần thiết bằng cách nhấn nút ◀ - hoặc ▶ + nhiều lần.

Nếu bạn không biết số hiệu kênh, nhấn nút P▼ hoặc P▲ để chọn mục Search. Nhấn nút ◀ - hoặc ▶ + để bắt đầu dò.

Kết quả Bỏ qua kênh sẽ quét vùng tần số cho đến khi kênh nào tiến hoặc kênh bạn đã chọn hiện thị trên màn hình.

8 Nếu bạn biết số hiệu chương trình cho mỗi kênh, chọn mục Program bằng cách nhấn nút P▼ hoặc P▲. Nhấn nút ◀ - hoặc ▶ + để tìm số hiệu.

9 Nhấn nút P▼ hoặc P▲ để chọn mục Store. Chọn OK bằng cách nhấn nút ◀ - hoặc ▶ +.




Kết quả Kênh và số hiệu chương trình liên quan sẽ độc lập.

10 Lặp lại các bước từ 7 đến 9 cho mỗi kênh muốn lưu.




## Đặt tên cho các kênh

*Nếu thông tin về tên kênh được phải vào thời điểm bạn đang lưu kênh thu công hoặc tối hơn, tên kênh sẽ được gán trực tiếp vào kênh. Tuy nhiên, bạn có thể thay đổi những tên này hoặc đặt tên mới nếu cần thiết.*

- 1 Nhấn nút **MENU**.  
Kết quả Danh mục chính sẽ hiện thị.
- 2 Nhấn nút **P▼** hoặc **P▲** để chọn mục **Channel**.  
Kết quả Các mục lựa chọn trong nhóm **Channel** sẽ hiện thị.
- 3 Nhấn nút **◀ -** hoặc **▶ +**.
- 4 Nhấn nút **P▼** hoặc **P▲** để chọn mục **Name**. Nhấn nút **◀ -** hoặc **▶ +**.  
Kết quả Các kênh hiện hành sẽ hiện thị.
- 5 Nếu cần, nhấn nút **P▼** hoặc **P▲** để chọn kênh mà bạn muốn đặt tên mới.
- 6 Nhấn nút **◀ -** hoặc **▶ +**.
- 7 Nhấn nút **P▼** hoặc **P▲** để chọn một ký tự (A ~ Z), con số (0~9) hoặc biểu tượng (-, khoảng trắng). Nhấn nút **◀ -** hoặc **▶ +** để chuyển về ký tự trước đó hoặc sang ký tự tiếp.
- 8 Lặp lại bước 5 đến 7 cho mỗi kênh mà bạn muốn đặt tên mới.

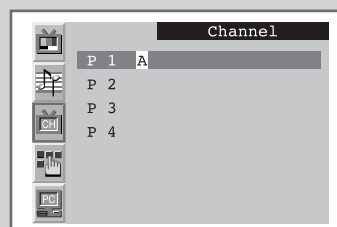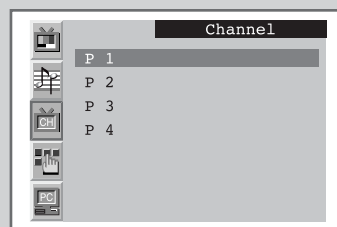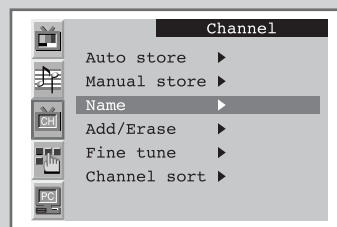

## Bỏ qua các kênh không muốn xem

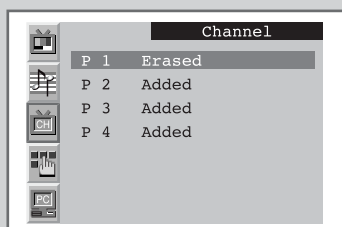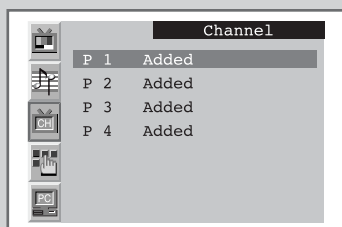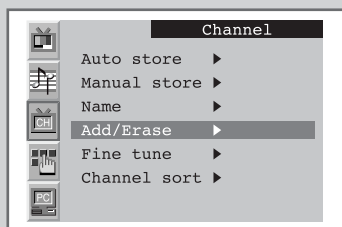

*Bạn có thể chọn những kênh mà bạn muốn loại bỏ trong quá trình dò kênh. Khi bạn dò qua các kênh này, những kênh bạn đã chọn sẽ không hiển thị.*

*Tất cả những kênh bạn không chọn sẽ loại bỏ sẽ không hiển thị trong quá trình dò kênh.*

- 1 Nhấn nút MENU.

Kết quả Danh mục chính sẽ hiển thị.

- 2 Nhấn nút P▼ hoặc P▲ để chọn mục Channel.

Kết quả Các mục lựa chọn trong nhóm Channel sẽ hiển thị.

- 3 Nhấn nút ◀ - hoặc ▶ +.


- 4 Nhấn nút P▼ hoặc P▲ để chọn mục Add/Erase. Nhấn nút ◀ - hoặc ▶ +.

Kết quả Các kênh này sẽ không hiển thị.

- 5 Nhấn nút P▼ hoặc P▲ để chọn kênh muốn thêm hoặc xóa. Nếu cần, nhấn nút ◀ - hoặc ▶ + để chọn Added hoặc Erased.

- 6 Lặp lại bước 5 cho mỗi kênh mà bạn muốn thêm vào hoặc xóa.

## Tính chỉnh bắt sóng kênh

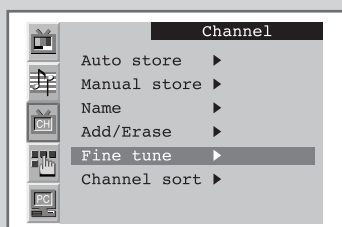

*Nếu tín hiệu nhận được rõ, bạn không cần phải tính chỉnh kênh, vì quá trình này được thực hiện tự động trong lúc dò sóng lâu kênh. Tuy nhiên, nếu tín hiệu quá yếu hoặc hình ảnh mờ, bạn có thể phải tính chỉnh kênh bằng tay.*

- 1 Nhấn nút MENU.

Kết quả Danh mục chính sẽ hiển thị.

- 2 Nhấn nút P▼ hoặc P▲ để chọn mục Channel.

Kết quả Các mục lựa chọn trong nhóm Channel sẽ hiển thị.

- 3 Nhấn nút ◀ - hoặc ▶ +.

- 4 Nhấn nút P▼ hoặc P▲ để chọn mục Fine tune.

- 5 Nhấn nút ◀ - hoặc ▶ + để điều chỉnh chất lượng hình ảnh sắc nét, rõ ràng và chất lượng âm thanh tốt.

## Sắp xếp các kênh nhớ lâu

**Bàn cài thể hiện nội số hiệu của 2 kênh nhớ**

- ◆ **Nhieu chỉnh lại số thời tới mà các kênh nhớ có tới nguồn lâu.**
- ◆ **Gain số để nhồi cho những kênh bạn xem thông xuyên nhất.**

1 Nhấn nút MENU.

Kết quả Danh mục chính sẽ hiện thị.

2 Nhấn nút P▼ hoặc P▲ để chọn mục Channel.

Kết quả Các mục lựa chọn trong nhóm Channel sẽ hiện thị.

3 Nhấn nút ◀ - hoặc ▶ +.

4 Nhấn nút P▼ hoặc P▲ để chọn mục Channel sorting.  
Nhấn nút ◀ - hoặc ▶ +.

Kết quả Các tùy chọn có trong mục Channel sorting sẽ hiện thị cùng với mục From để chọn.





5 Nhấn nhiều lần nút ◀ - hoặc ▶ + để chọn số hiệu kênh bạn muốn thay đổi.

6 Nhấn nút P▼ hoặc P▲ để chọn mục To. Nhấn nút ◀ - hoặc ▶ + nhiều lần để chọn con số mới mà bạn muốn gán cho kênh này.



7 Nhấn nút P▼ hoặc P▲ để chọn mục Store. Nhấn nút ◀ - hoặc ▶ + để chọn OK nhằm xác nhận việc hoán đổi số hiệu kênh.

Kết quả Kênh nào chọn nào hoán đổi với kênh nào lâu trước rồi theo số hiệu kênh đã chọn.

8 Muốn chuyển tất cả các kênh tới số hiệu kênh cần thiết, hãy lặp lại bước 5 đến 7 sau khi chọn mục From bằng cách nhấn nút P▼ hoặc P▲.

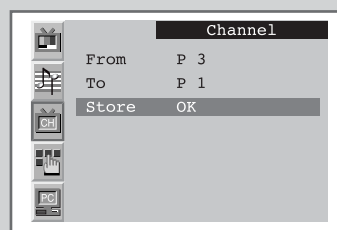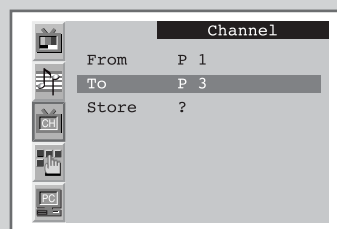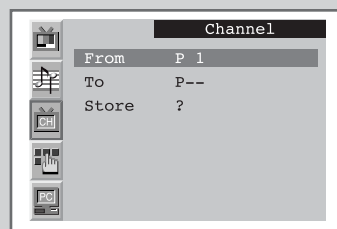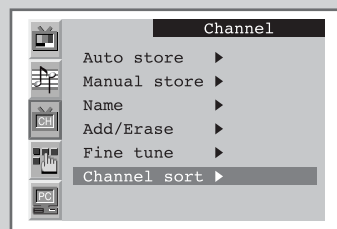

## Thay đổi chuẩn hình ảnh

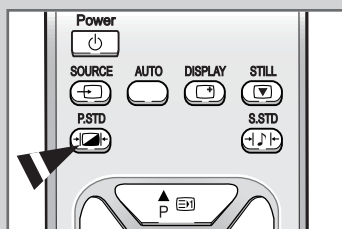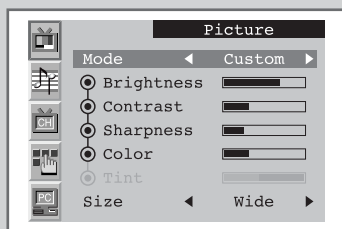

Bạn có thể chọn loại hình ảnh thích ứng nhất với yêu cầu của bạn.

- 1 Nhấn nút MENU.

Kết quả Danh mục chính sẽ hiện thị.

- 2 Nhấn nút P▼ hoặc P▲ để chọn mục Picture.

Kết quả Các mức lựa chọn trong nhóm Picture sẽ hiện thị.

- 3 Nhấn nút ◀ - hoặc ▶ +.

Kết quả Mục Mode sẽ được chọn.



- 4 bạn có thể xác định hình chuẩn âm thanh cần thiết bằng cách nhấn nút ◀ - hoặc ▶ + nhiều lần. Bạn có thể chọn những hiệu ứng hình ảnh sau:

**Custom – Standard – Natural – Mild.**

 ➤ Bạn cũng có thể cài đặt những tùy chọn này chỉ bằng cách nhấn nút P.STD (Chuẩn Hình Ảnh).

➤ Ở danh mục Picture, nếu bạn thay đổi giá trị các mức Contrast (tổng phản), Brightness (nhiệt độ), Sharpness (nhiệt độ), Color (màu), hoặc Tint (sắc thái) (chỉ dành cho hệ NTSC), mục Custom sẽ được chọn tối ưu.

## Nhiều cách các thông số hình ảnh

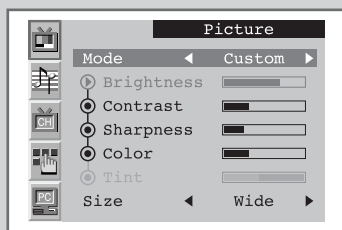

Man hình TV của bạn có một số mức thông số cho phép bạn nhiều cách chỉnh sửa hình ảnh.

- 1 Nhấn nút MENU.

Kết quả Danh mục chính sẽ hiện thị.

- 2 Nhấn nút P▼ hoặc P▲ để chọn mục Picture.

Kết quả Các mức lựa chọn trong nhóm Picture sẽ hiện thị.

- 3 Nhấn nút ◀ - hoặc ▶ +.

- 4 Nhấn nút P▼ hoặc P▲ để chọn thông số (Brightness, Contrast, Sharpness, Color hoặc Tint - chỉ dành cho hệ NTSC) cần chỉnh sửa. Nhấn nút ◀ - hoặc ▶ +.

Kết quả Một thanh ngang sẽ hiện thị.

- 5 Nhấn nút ◀ - hoặc ▶ + để chọn thông số cần thiết.



➤ Nếu bạn thực hiện bất kỳ thay đổi nào, chuẩn âm thanh sẽ tối ưu chuyển sang chế độ Custom.



## Chọn dạng hình ảnh

*Bạn có thể chọn loại hình ảnh thích ứng nhất với yêu cầu của bạn.*


- 1 Nhấn nút **MENU**.  
*Kết quả:* Danh mục chính sẽ hiện thị.
- 2 Nhấn nút **P▼** hoặc **P▲** để chọn mục **Picture**.  
*Kết quả:* Các mức lựa chọn trong nhóm **Picture** sẽ hiện thị.
- 3 Nhấn nút **◀ -** hoặc **+ ▶**.
- 4 Nhấn nút **P▼** hoặc **P▲** để chọn mục **Size**.
- 5 Bạn có thể xác định hình chuẩn âm thanh cài đặt bằng cách nhấn nút **◀ -** hoặc **+ ▶** nhiều lần. Bạn có thể chọn những hiệu ứng hình ảnh sau:  
**Wide – Normal 1 – Normal 2 – Zoom 1 – Zoom 2.**  
➤ Bạn cũng có thể cài đặt những tùy chọn này bằng cách nhấn nút **P.SIZE** (Kích thước hình ảnh).

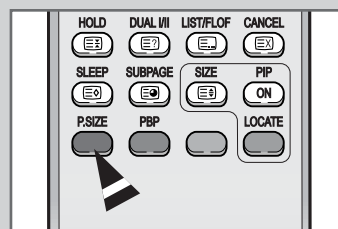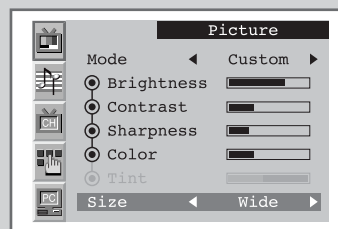



## Làm nổi bật khung hình hiện tại

*Nhấn nút **STILL** trên bo mạch khiến tivi xa sẽ làm nổi bật hình trong một khung hình.*

*Nếu trở lại màn hình bình thường, nhấn nút **STILL** lần nữa.*

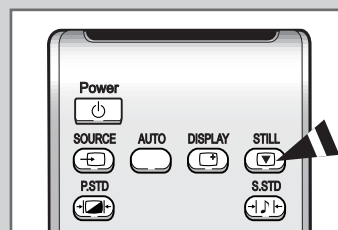

## Thay đổi chuẩn âm thanh

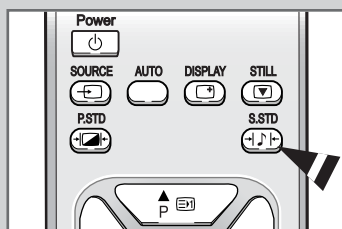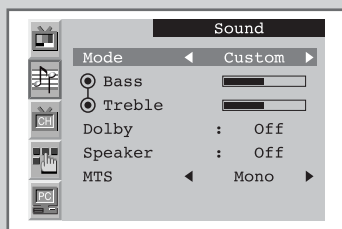

Bản cài đặt dùng ba hiệu chỉnh để chọn loại hiệu chỉnh âm thanh nào bạn muốn sử dụng khi xem một chương trình.

- 1 Nhấn nút MENU.

Kết quả Danh mục chính sẽ hiện thì.

- 2 Nhấn nút P▼ hoặc P▲ để chọn mức Sound.

Kết quả Các mức lựa chọn trong nhóm Sound sẽ hiện thì.

- 3 Nhấn nút ◀ - hoặc ▶ +.

Kết quả Mức Mode nào sẽ chọn.

- 4 Bấm các hiệu chỉnh chuẩn âm thanh cần thiết bằng cách nhấn nút ◀ - hoặc ▶ + nhiều lần. Những hiệu chỉnh âm thanh sau này có thể dùng:

Custom – Standard – Music – Movie – Speech.

➤ Bấm cũng có thể cài đặt những tùy chọn này bằng cách nhấn nút S.STD (Chuẩn âm thanh).

## Cách hiệu chỉnh các thông số âm thanh



Bấm các hiệu chỉnh các mức thông số âm thanh sau để phù hợp với sở thích của mình.

- 1 Nhấn nút MENU.

Kết quả Danh mục chính sẽ hiện thì.

- 2 Nhấn nút P▼ hoặc P▲ để chọn mức Sound.

Kết quả Các mức lựa chọn trong nhóm Sound sẽ hiện thì.

- 3 Nhấn nút ◀ - hoặc ▶ +.

- 4 Nhấn nút P▼ hoặc P▲ để chọn tùy chọn (Bass hoặc Treble) cần hiệu chỉnh. Nhấn nút ◀ - hoặc ▶ +.

Kết quả Một thanh ngang sẽ hiện thì.


- 5 Nhấn nút ◀ - hoặc ▶ + để chọn thông số cần thiết.

➤ Nếu bạn thực hiện bất kỳ thay đổi nào, chuẩn âm thanh sẽ tự động chuyển sang chế độ Custom.

## Thõõng thõc ăm thanh vom (Dolby)

*Chõic năng năy măng lăi hiệũ õõng ăm thanh vom ăb tăi nhăc băng căch phõi hõp hai loa trăi văiphăi.*

- 1 Nhăn nút **MENU**.  
Ket quăi Dănh mĩc chĩnh seĩhiệũ thĩ.
- 2 Nhăn nút **P▼** hoăc nút **P▲** ãeĩchõn mĩc **Sound**.  
Ket quăi Căic mĩc lõă chõn trõng nhõm **Sound** seĩhiệũ thĩ.
- 3 Nhăn nút **◀ -** hoăc **▶ +**.
- 4 Nhăn nút **P▼** hoăc nút **P▲** ãeĩchõn mĩc **Dolby**.
- 5 Nhăn nút **◀ -** hoăc **▶ +** ãeĩchõn mĩc **On** nhăim truyeũ ăm thanh văo căic loa tĩch hõp.  
➤ Băn cũng cõĩ theĩchõn tũy chõn năy chĩ căn nhăn nút **V.DOLBY** (Ăm thanh vom ăb).

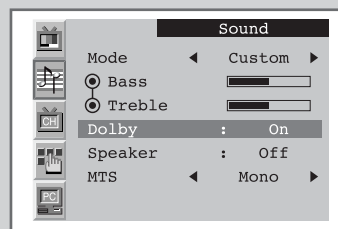



## Băt/Tăt loa tĩch hõp

*Khi loa tĩch hõp bĩ tăt, tăt căi ăm thanh seĩ ãõĩc truyeũ qua loa găĩ ngoăi.*

- 1 Nhăn nút **MENU**.  
Ket quăi Dănh mĩc chĩnh seĩhiệũ thĩ.
- 2 Nhăn nút **P▼** hoăc nút **P▲** ãeĩchõn mĩc **Sound**.  
Ket quăi Căic mĩc lõă chõn trõng nhõm **Sound** seĩhiệũ thĩ.
- 3 Nhăn nút **◀ -** hoăc **▶ +**.
- 4 Nhăn nút **P▼** hoăc nút **P▲** ãeĩchõn mĩc **Speaker**.
- 5 Nhăn nút **◀ -** hoăc **▶ +** ãeĩchõn mĩc **On** nhăim truyeũ ăm thanh văo căic loa tĩch hõp.



## Chọn chèo nâng MTS (Multichannel Television Stereo)

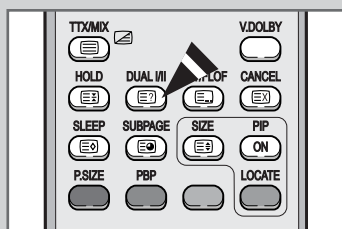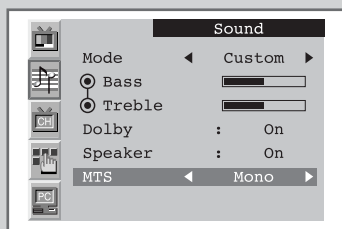

*Tùy theo chương trình cui the ñang ñoïc phat soing, bãn coù the ña  
nghe bang Stereo, Mono hoac Dual I/II (Dual I/II theõng la moät  
choïc ñang dích ngoãn ngoãn ñoïc ngoai)*

- 1 Nhấn nút **MENU**.  
Kết quả Danh mục chính sẽ hiện thị.
- 2 Nhấn nút **P▼** hoặc **P▲** để chọn mục **Sound**.  
Kết quả Các mục lựa chọn trong nhóm **Sound** sẽ hiện thị.
- 3 Nhấn nút **◀ -** hoặc **▶ +**.
- 4 Nhấn nút **P▼** hoặc **P▲** để chọn mục **MTS**.
- 5 Bấm có thể xác định hình chuẩn âm thanh cần thiết bằng cách nhấn nút **◀ -** hoặc **▶ +** nhiều lần. Các chuẩn âm thanh sẽ hiện thị theo thứ tự sau: **Mono – Stereo – Dual 1 – Dual 2**.







Bạn cũng có thể cài đặt những tùy chọn này bằng cách nhấn nút S.STD (Chuyển âm thanh). Nút "DUAL I/II" hiển thị/nhảy khi việc thi hành và xuất tín hiệu âm thanh.

- ◆ Nếu hiệu kien bat song trôineh xâu ñi, bạn sẽnghe ñiôc âm thanh deãdang hôn nếu cheiñoiâm thanh ñiôc chuyênh vềi**Mono**.
- ◆ Nếu tín hiệu Stereo bị yếu vàxay ra hiện tợng tợi ñiêng chuyênh cheiñoi bạn hãy chuyênh qua cheiñoi**Mono**.
- ◆ Khi nhận tín hiệu âm thanh Mono ôicheiñoiAV, hãy cãm dấy âm thanh vào cõng "AUDIO (L)" ôimặt sau màn hình.






## Bật chức năng Màn hình con (PIP)

Bạn có thể cho hiển thị một màn hình con nằm trong màn hình chính của chương trình TV hoặc màn hình hiển thị nội dung của các thiết bị AV khác nhờ VCR hoặc DVD. Theo cách này bạn có thể vừa xem chương trình TV hoặc quan sát hình ảnh nhập vào từ bất cứ thiết bị nào nào kết nối trong khi vẫn xem chương trình TV hoặc hình ảnh nhập từ những nguồn khác.

- 1 Nhấn nút MENU.  
Kết quả Danh mục chính sẽ hiển thị.
- 2 Nhấn nút P▼ hoặc P▲ để chọn mục **Function**.  
Kết quả Các mức lựa chọn trong nhóm **Function** sẽ hiển thị.
- 3 Nhấn nút ◀ - hoặc ▶ +.
- 4 Nhấn nút P▼ hoặc P▲ để chọn mục **PIP**. Nhấn nút ◀ - hoặc ▶ +.  
Kết quả Các mức lựa chọn trong nhóm **PIP** sẽ hiển thị.
- 5 Nhấn nút ◀ - hoặc ▶ + để chọn mục **On**.  
➤ Bạn cũng có thể nhấn nút **PIP ON** để bật chức năng PIP. Nếu tắt chức năng này, nhấn nút rời lần nữa.
- 6 Nhấn nút P▼ hoặc P▲ để chọn mục **TV/Video**. Nhấn nút ◀ - hoặc ▶ + để chọn nguồn hình cho màn hình con.  
Kết quả Các nguồn hình ảnh sẽ hiển thị theo thứ tự sau:  
**TV – Scart – Video – S-Video**.
- 7 Nhấn nút P▼ hoặc P▲ để chọn mục **Size**. Nhấn nút ◀ - hoặc ▶ + để chọn kích cỡ cho màn hình con.  
Kết quả Các kích cỡ sẽ hiển thị theo thứ tự sau:  
**Small – Medium – Large**.  
➤ Bạn cũng có thể cài đặt những tùy chọn này bằng cách nhấn nút **SIZE**.
- 8 Nhấn nút P▼ hoặc P▲ để chọn mục **Position**. Di chuyển màn hình con ngược chiều kim đồng hồ bằng cách nhấn nút ◀ - hoặc ▶ +.  
➤ Bạn cũng có thể di chuyển màn hình con bằng cách nhấn nút **LOCATE**.

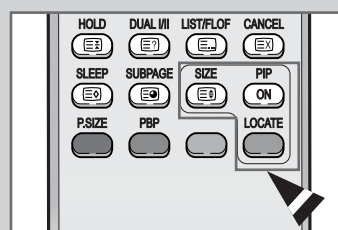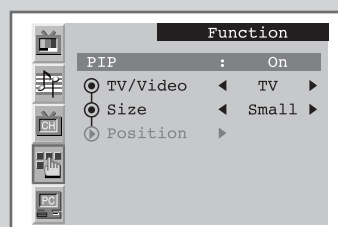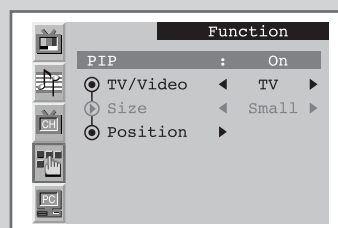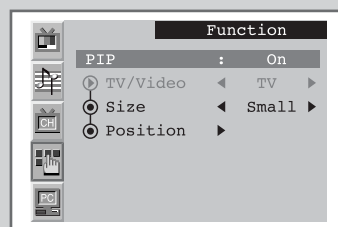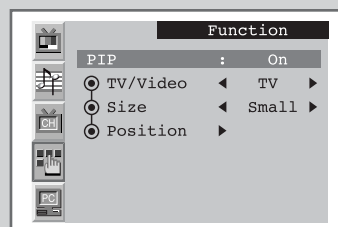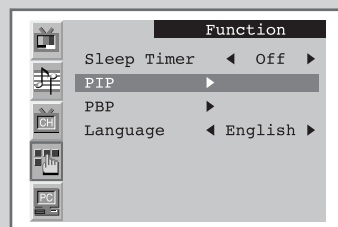

## Bật chức năng Nhiều màn hình (PBP; Màn hình nổi)

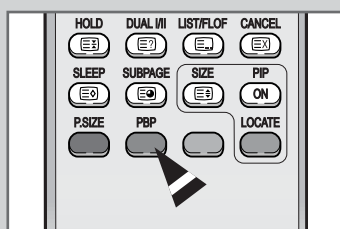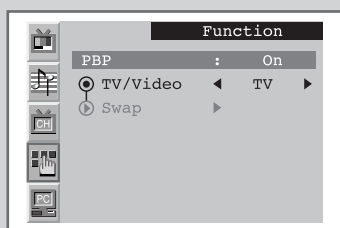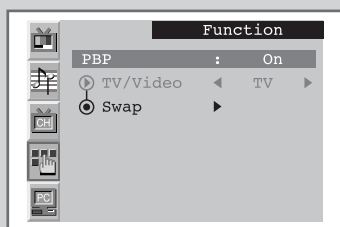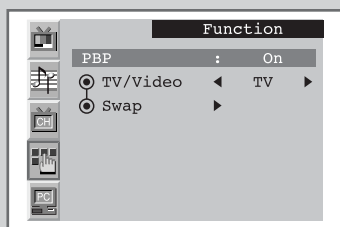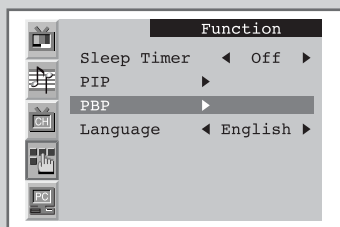

*Khi cài đặt xong thiết bị AV khác (PC, VCR hoặc DVD) hoặc kết nối với màn hình hoặc khi đang xem TV, bạn có thể cho hiện thì hai nguồn hình cùng lúc trên màn hình.*

- 1 Nhấn nút **MENU**.

Kết quả Danh mục chính sẽ hiện thì.

- 2 Nhấn nút **P▼** hoặc **P▲** để chọn mục **Function**.

Kết quả Các mục lựa chọn trong nhóm **Function** sẽ hiện thì.

- 3 Nhấn nút **◀** - hoặc **▶**.

- 4 Nhấn nút **P▼** hoặc **P▲** để chọn mục **PBP**. Nhấn nút **◀** - hoặc **▶**.

Kết quả Các mục lựa chọn trong nhóm **PBP** sẽ hiện thì.

- 5 Nhấn nút **◀** - hoặc **▶** để chọn mục **On**.

➤ Bạn cũng có thể nhấn nút **PBP** để bật chức năng **PBP**. Nếu tắt chức năng này, nhấn nút nào lần nữa.

- 6 Nhấn nút **P▼** hoặc **P▲** để chọn mục **TV/Video**. Nhấn nút **◀** - hoặc **▶** để chọn nguồn hình cho màn hình phụ.

Kết quả Các nguồn hình ảnh sẽ hiện thì theo thứ tự sau: **TV – Scart – Video – S-Video**.

- 7 Nhấn nút **P▼** hoặc **P▲** để chọn mục **Swap**.

- 8 Nhấn nút **◀** - hoặc **▶**.

Kết quả Màn hình chính và màn hình phụ hoán đổi cho nhau.

➤ Bạn cũng có thể làm việc này mà chỉ cần nhấn nút **PBP**.



## Chức năng timer tắt

Bạn có thể chọn một khoảng thời gian từ 10 phút đến 240 phút sau khi nào cái tắt chức năng timer tắt.

- Nhấn nút **MENU**.  
Kết quả Danh mục chính sẽ hiện thị.
- Nhấn nút **P▼** hoặc **P▲** để chọn mục **Function**.  
Kết quả Các mục lựa chọn trong nhóm **Function** sẽ hiện thị.
- Nhấn nút **◀** - hoặc **▶** +.  
Kết quả Mục **Sleep Timer** sẽ được chọn.
- Nhấn nút **◀** - hoặc **▶** + nhiều lần để chọn số phút mà sau đó màn hình sẽ tắt.
  - Bạn có thể cài đặt cho màn hình tắt ở những khoảng thời gian dưới đây: 10, 20, 30, 60, 90, 120, 150, 180, 210 và 240 phút.


➤ Bạn cũng có thể nhấn nút **"SLEEP"** để chọn số phút.

Nếu bạn nhấn thời gian tắt thì nó sẽ cài đặt, màn hình sẽ hiện thị số thời gian còn lại và sau đó màn hình sẽ tắt. Nếu bạn nhấn thời gian tắt chưa được cài đặt, màn hình sẽ hiện thị Off.


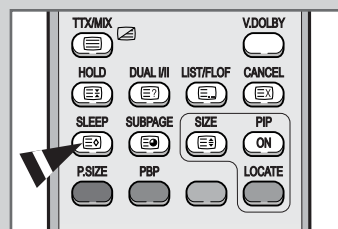
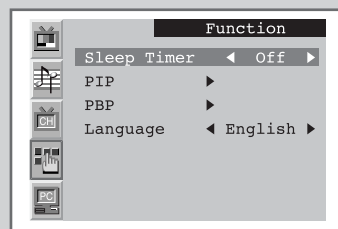


## Chức năng hiển thị thông tin

Bạn có thể xem các thông số cái đặt hiện tại của một nguồn nào đó bằng cách nhấn nút **"DISPLAY"** trên bo mạch khi ở xa. Thông tin sẽ hiển thị sẽ khác nhau tùy theo nguồn được chọn.

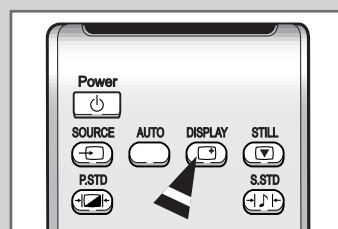



## Nhieu chanh noasang vanhoatong phan

 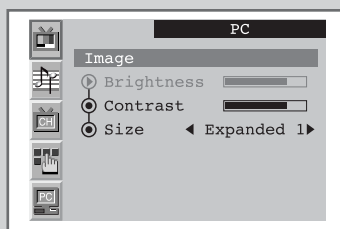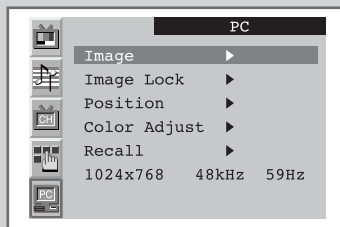

➤ Nhấn nút **SOURCE** để cài sẵn chế độ PC.

- 1 Nhấn nút **MENU**.  
Kết quả Danh mục chính sẽ hiện thì.
- 2 Nhấn nút **P▼** hoặc **P▲** để chọn mục 'PC'.  
Kết quả Các mục lựa chọn trong nhóm **PC** sẽ hiện thì.
- 3 Nhấn nút **◀** - hoặc **▶** +.  
Kết quả Mục **Image** sẽ được chọn.
- 4 Nhấn nút **◀** - hoặc **▶** + lần nữa.  
Kết quả Các tùy chọn có trong mục **Image** sẽ hiện thì.
- 5 Nhấn nút **P▼** hoặc **P▲** để chọn tùy chọn cần hiệu chỉnh (Brightness hoặc Contrast) cho màu sắc của hình ảnh máy tính. Nhấn nút **◀** - hoặc **▶** +.  
Kết quả Một thanh ngang sẽ hiện thì.
- 6 Nhấn nút **◀** - hoặc **▶** + để chọn giá trị cần thiết.

## Chọn kích cỡ hình ảnh

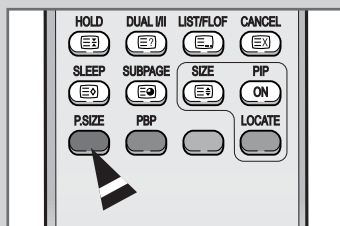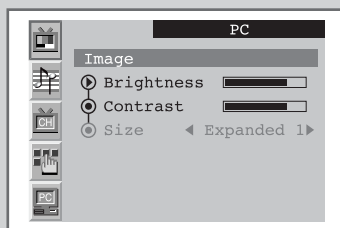

➤ Nhấn nút **SOURCE** để cài sẵn chế độ PC.

- 1 Nhấn nút **MENU**.  
Kết quả Danh mục chính sẽ hiện thì.
- 2 Nhấn nút **P▼** hoặc **P▲** để chọn mục **PC**.  
Kết quả Các tùy chọn có trong mục **PC** sẽ hiện thì.
- 3 Nhấn nút **◀** - hoặc **▶** +.  
Kết quả Mục **Image** sẽ được chọn.
- 4 Nhấn nút **◀** - hoặc **▶** + lần nữa.  
Kết quả Các tùy chọn có trong mục **Image** sẽ hiện thì.
- 5 Nhấn nút **P▼** hoặc **P▲** để chọn mục **Size**. Nhấn nút **◀** - hoặc **▶** + để chọn một kích cỡ cho hình ảnh máy tính.  
Kết quả Các kích cỡ sẽ hiện thì theo thời gian sau:  
**Expanded 1 - Expanded 2 - Normal.**

➤ Bạn cũng có thể cài đặt những tùy chọn này bằng cách nhấn nút **P.SIZE** (Kích thước hình ảnh).





## Nhieu chỉnh chất lượng hình ảnh

➤ Nhấn nút **SOURCE** để cài sẵn chế độ PC.

*Chức năng này được dùng để tinh chỉnh và cho chất lượng hình ảnh tốt nhất bằng cách loại bỏ nhiễu làm cho hình ảnh không rõ nét do cường độ của sóng môi trường.*

- 1 Nhấn nút **MENU**.  
Kết quả Danh mục chỉnh sẽ hiện thì.
- 2 Nhấn nút **P▼** hoặc **P▲** để chọn mức **PC**.  
Kết quả Các tùy chọn có trong mức **PC** sẽ hiện thì.
- 3 Nhấn nút **◀ -** hoặc **▶ +**.
- 4 Nhấn nút **P▼** hoặc **P▲** để chọn mức **Image Lock**. Nhấn nút **◀ -** hoặc **▶ +**.  
Kết quả Các tùy chọn có trong mức **Image Lock** sẽ hiện thì.
- 5 Nhấn nút **P▼** hoặc **P▲** để chọn tùy chọn cần hiệu chỉnh (**Coarse** hoặc **Fine**) cho chất lượng màu của hình ảnh máy tính. Nhấn nút **◀ -** hoặc **▶ +**.  
Kết quả Một thanh ngang sẽ hiện thì.
- 6 Nhấn nút **◀ -** hoặc **▶ +** để chọn giá trị cần thiết.



➤ Chức năng này có thể thay đổi nội dung của hình ảnh. Nếu cần, hãy hiệu chỉnh vị trí hình vào giờ.

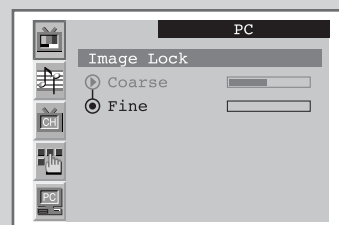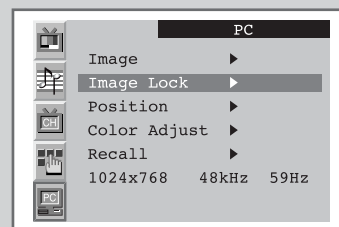




## Thay đổi vị trí hình ảnh

➤ Nhấn nút **SOURCE** để cài sẵn chế độ PC.

- 1 Nhấn nút **MENU**.  
Kết quả Danh mục chỉnh sẽ hiện thì.
- 2 Nhấn nút **P▼** hoặc **P▲** để chọn mức **PC**.  
Kết quả Các tùy chọn có trong mức **PC** sẽ hiện thì.
- 3 Nhấn nút **◀ -** hoặc **▶ +**.
- 4 Nhấn nút **P▼** hoặc **P▲** để chọn mức **Position**. Nhấn nút **◀ -** hoặc **▶ +**.
- 5 Nhấn nút **P▼** hoặc **P▲** để chọn vị trí cần hiệu chỉnh (**H-Position** hoặc **V-Position**). Nhấn nút **◀ -** hoặc **▶ +**.  
Kết quả Một thanh ngang sẽ hiện thì.
- 6 Nhấn nút **◀ -** hoặc **▶ +** để chọn giá trị cần thiết.

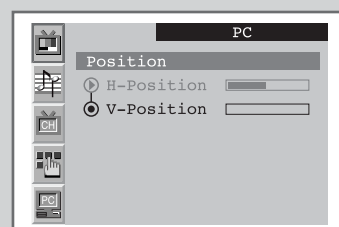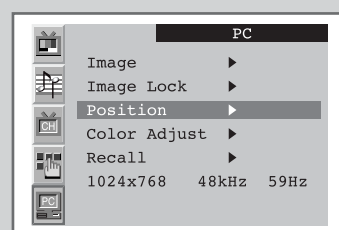

## Nhieu chanh mau

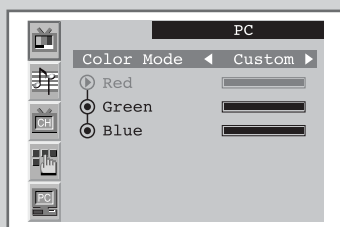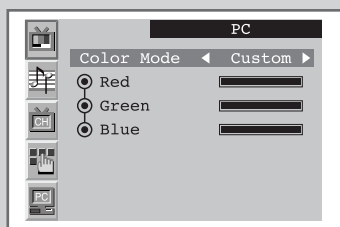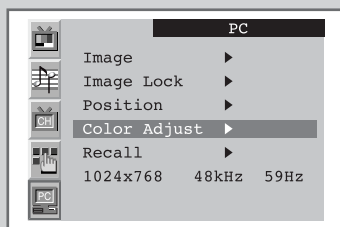

➤ Nhấn nút **SOURCE** để cài sẵn chế độ PC.

1 Nhấn nút **MENU**.

Kết quả Danh mục chính sẽ hiện thì.

2 Nhấn nút **P▼** hoặc **P▲** để chọn mức **PC**.

Kết quả Các tùy chọn có trong mức **PC** sẽ hiện thì.

3 Nhấn nút **◀** - hoặc **▶** +.

4 Nhấn nút **P▼** hoặc **P▲** để chọn mức **Color Adjust**. Nhấn nút **◀** - hoặc **▶** +.

Kết quả Các tùy chọn có trong mức **Color Adjust** sẽ hiện thì cùng với mức **Color Mode** được chọn.

5 Nhấn nút **◀** - hoặc **▶** + nhiều lần để chọn chế độ màu cần thiết. Bạn có thể chọn những chế độ màu sau: **Custom** - **Color 1** - **Color 2** - **Color 3**.

6 Nếu muốn nhiều chanh mau cho phù hợp nhất với yêu cầu của bạn, nhấn nút **P▼** hoặc **P▲** để chọn các tùy chọn (**Red**, **Green** hoặc **Blue**) cần nhiều chanh. Nhấn nút **◀** - hoặc **▶** +.

Kết quả Một thanh ngang sẽ hiện thì.

7 Nhấn nút **◀** - hoặc **▶** + để chọn giá trị cần thiết.

➤ Nếu bạn thay đổi các giá trị **Red**, **Green** hoặc **Blue**, mức **Color Mode** sẽ tự động chuyển về **Custom**.

## Cài đặt lại giá trị gốc các thông số hình ảnh

➤ Nhấn nút **SOURCE** để cài sẵn chế độ PC.

**Bạn có thể thay tất cả các thông số hình ảnh bằng giá trị mặc định khi màn hình được xuất xưởng.**

1 Nhấn nút **MENU**.

Kết quả Danh mục chính sẽ hiện thì.

2 Nhấn nút **P▼** hoặc **P▲** để chọn mức **PC**.

Kết quả Các tùy chọn có trong mức **PC** sẽ hiện thì.



3 Nhấn nút **◀** - hoặc **▶** +.

4 Nhấn nút **P▼** hoặc **P▲** để chọn mức **Recall**. Nhấn nút **◀** - hoặc **▶** +.

Kết quả Các tùy chọn có trong mức **Recall** sẽ hiện thì.

5 Nhấn nút **P▼** hoặc **P▲** để chọn tùy chọn (**Image Recall** hoặc **Color Recall**) cần thay thế. Nhấn nút **◀** - hoặc **▶** +.

Kết quả Màn hình sẽ chuyển sang màu nền và sau vài giây sẽ trở lại chế độ hiển thị nguyên thủy.

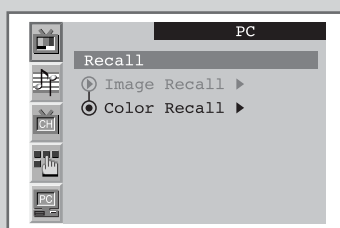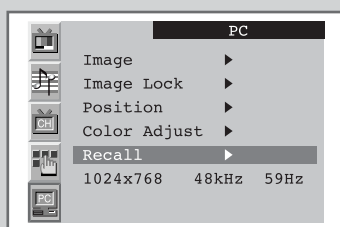

## Cài chế độ hiển thị

Nếu tín hiệu thu được không hợp chuẩn, màn hình sẽ tự động hiệu chỉnh. Nếu tín hiệu từ hệ thống máy tính không tương thích với chế độ tín hiệu chuẩn, hãy điều chỉnh chế độ hiển thị bằng cách tham khảo thêm Sách hướng dẫn sử dụng của card màn hình vì màn hình có thể không hiển thị hoặc chờ đợi lâu khi bắt đầu. Với những chế độ hiển thị được liệt kê dưới đây, hình ảnh hiển thị trên màn hình sẽ được tối ưu hóa trong quá trình sản xuất.

Che độ	Phân giải	Tần số quét ngang (kHz)	Tần số quét dọc (Hz)	Tần số hình ảnh (MHz)	Clock hình ảnh (H/V)
VGA	720 x 400	31.469	70.087	28.322	- / +
	640 x 480	31.469	59.940	25.175	- / -
	640 x 480	37.500	75.000	31.500	- / -
	640 x 480	43.269	85.008	36.000	- / -
SVGA	800 x 600	46.875	75.000	49.500	+ / +
	800 x 600	53.674	85.061	56.250	+ / +
XGA	1024 x 768	48.363	60.004	65.000	- / -
	1024 x 768	60.023	75.029	78.750	+ / +
	1024 x 768	68.677	84.997	94.500	+ / +
SXGA	1280 x 1024	63.981	60.020	108.000	+ / -, + / -
	1280 x 1024	79.976	75.025	135.000	+ / +
UXGA	1600 x 1200	75.000	60.000	162.000	+ / -, + / -
WUXGA (SyncMaster 241MP)	1920 x 1200	75.000	60.000	193.156	+ / -, + / -


## Chức năng tiết kiệm điện

Màn hình này có một hệ thống quản lý điện năng tích hợp được gọi là Tiết Kiệm Điện. Hệ thống này tiết kiệm điện bằng cách chuyển màn hình sang chế độ dùng ít năng lượng khi nó không được sử dụng trong một khoảng thời gian nhất định. Bạn có thể chọn các chế độ "On", "Standby", "Sleep" và "Deep Sleep". Chức năng Tiết Kiệm Điện hoạt động với một card màn hình tương thích chuẩn VESA DPMS được cài đặt trong máy tính. Bạn phải dùng một phần mềm tiện ích cài đặt trong máy tính để thiết lập chức năng này.

Trạng thái	Hoạt động bình thường	Che độChức năng tiết kiệm điện(EPA/NUTEK)
Đang hoạt động	Đang hoạt động	Không hoạt động
Đang hoạt động	Đang hoạt động	Không hoạt động
Đang chờ	Xanh	Nhấp nháy (khoảng cách 1 giây)
Công suất tiêu thụ	SyncMaster 211MP : 110W (Tối đa) SyncMaster 241MP : 120W (Tối đa)	Ít hơn 8W

➤ Màn hình sẽ tự động trở về hoạt động bình thường khi đang chờ hoặc đang chờ chờ. Hình ảnh sẽ xuất hiện khi bạn di chuyển chuột máy tính hoặc nhấn một phím trên bàn phím.

## Chức năng Teletext

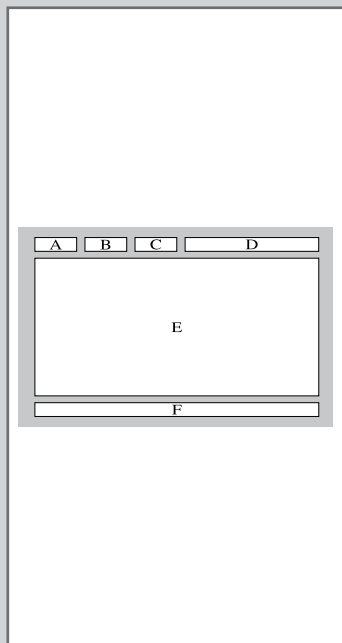

Hầu hết các kênh truyền hình đều cung cấp dịch vui thông tin cho thông qua teletext. Thông tin cung cấp bao gồm:

- ◆ Thời gian các chương trình truyền hình
- ◆ Bản tin và Dữ liệu thời tiết
- ◆ Tin thể thao
- ◆ Thông tin du lịch


Các thông tin này được chia thành trang coi hình số (xem biểu đồ).

Phân	Nội dung
A	Số trang được chọn.
B	Nhãn dạng kênh đang phát.
C	Số trang hiện hành hoặc thông báo đầu tiên.
D	Ngày và giờ.
E	Văn bản.
F	Thông tin trạng thái. Thông tin FASTEXT.

➤ Thông tin Teletext thông thường được chia thành nhiều trang hiển thị theo thời gian. Bạn có thể truy cập bằng cách:

- ◆ Nhập số trang
- ◆ Chọn một chuỗi trong danh sách
- ◆ Chọn một tiêu đề màu (hệ thống FASTEXT)

## Hiện thị Thông tin Teletext

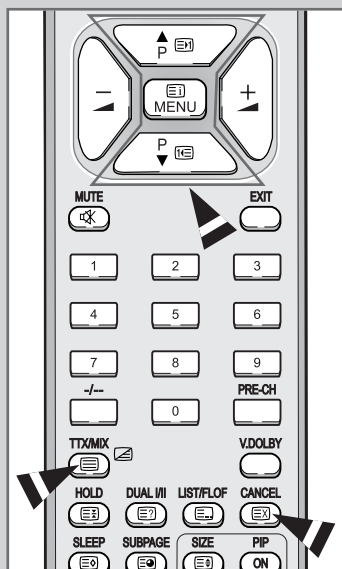

Bạn có thể cho hiển thị thông tin Teletext trên màn hình bất cứ lúc nào.

➤ Nếu thông tin Teletext được hiển thị đúng, việc bắt sóng kênh phải ổn định; nếu không:

- ◆ Thông tin có thể thất lạc
- ◆ Một số trang có thể không xem được

1 Sử dụng nút P▼ hay P▲ để chọn kênh cung cấp dịch vui teletext.

2 Nhấn nút TTX/MIX để kích hoạt chế độ teletext.

Kết quả Trang chứa nội dung sẽ hiển thị. Có thể xem lại trang này bất cứ lúc nào bằng cách nhấn nút (E) (index).

3 Nếu bạn muốn hiển thị chương trình đang phát song song cùng lúc với trang teletext, nhấn nút TTX/MIX lần nữa.

4 Nếu trở lại màn hình bình thường, nhấn nút CANCEL (E).

5 Nhấn nút TTX/MIX lần nữa để thoát khỏi chế độ hiển thị teletext.


## Chọn một trang bằng số

**Bạn có thể nhập số trang trực tiếp bằng cách nhấn nút số trên bo mạch khi cần.**



- 1 Nhập số trang có 3 chữ số trong nội dung teletext bằng cách nhấn những nút số đồng ý.
- 2 Nếu trang nào đó chọn có liên kết với những trang phụ khác, các trang này sẽ hiện thì theo thời gian. Nếu bạn dừng tại một trang nào đó, nhấn nút **HOLD** (⏸). Nếu tiếp tục xem, nhấn nút **HOLD** (⏸) lần nữa.

**Cách dùng các tùy chọn hiện thì:**

Nội dung thì...	Nhấn...
◆ Caithông tin Teletext vàchồng trình phát sóng thông	TTX/MIX
◆ Vành ảnh (chàng ảnh nhỏ các câu trả lời cho trò chơi)	⏸ (mở)
◆ Màn hình bình thường	⏸ (mở) lần nữa
◆ Một trang phụ, bằng cách nhập số trang gồm 4 chữ số	SUBPAGE (⏸)
◆ Trang kế tiếp	⏸ (trang trước)
◆ Trang trước	⏸ (trang sau)
◆ Gặp nội dung chơi trong:	SIZE (⏸)
◆ Nội dung trên màn hình	•• Một lần
◆ Nội dung dưới màn hình	• Hai lần
◆ Màn hình bình thường	•• Ba lần

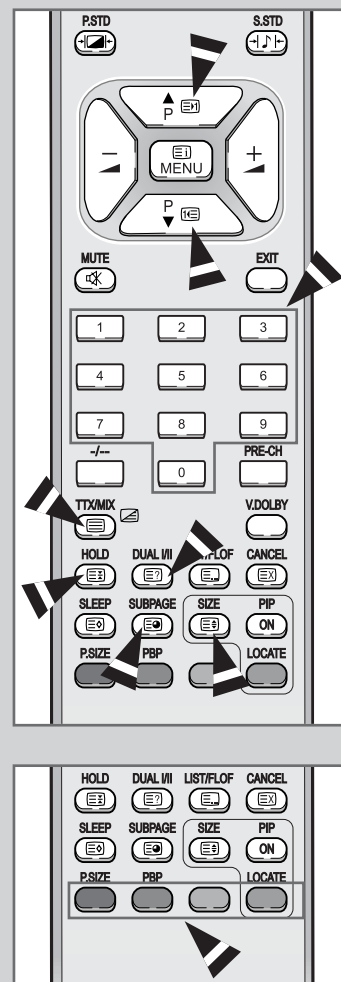

## Dùng FLOF để chọn một trang

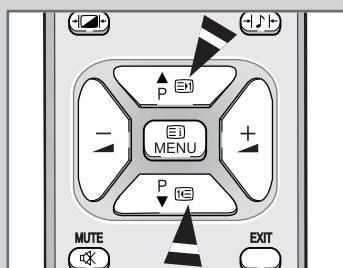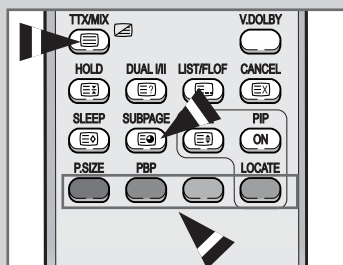

*Các chui ñe co i trong nhöng trang Teletext ñöôc ma i ho i ba ng mau; ba n co i the i co n xu a t hie n o i d o ng tra ng tha i.*

1 Hie n th i tra ng m u c lu c Teletext ba ng ca i nh a n n u t TTX/MIX.

2 Nh a n n u t mau t o ng o ng v o i chui ñe ba n mu o n co n; nhöng chui ñe co i the i co n xu a t hie n o i d o ng tra ng tha i.

Ket qua i Tra ng ñöôc co n hie n th i v o i nhöng th o ng tin ba ng mau kh a c ma ba n co i the i co n the o ca i t o ng o ng.

3 Ñe hie n th i tra ng tro o c ño i ho a c tra ng tie p the o, nh a n n u t mau t o ng o ng.


4 Ñe hie n th i tra ng ph u i xem ca i bo o c sau.

◆ Nh a n n u t **SUBPAGE** (E0).

Ket qua i Ca c tra ng ph u i hie n h o u se hie n th i.

◆ Co n tra ng ph u i ca n th iet. Ba n co i the i cu o n le h xu o ng ca i tra ng ph u i ba ng ca i nh a n n u t P (P) ho a c P (P).

## Löu tro o ca i tra ng Teletext

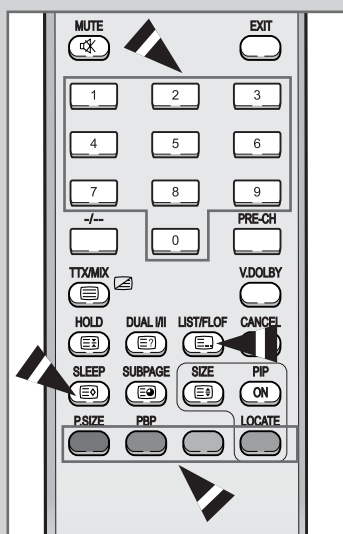

*Ba n co i the i löu to i ña 4 tra ng teletext ñe x e m la i va o lu c ra i nh.*

1 Co n che i ño i LIST ba ng n u t LIST/FLOF (E0).

Ket qua i Bo n co n so i go m 3 co i so i ñöôc hie n th i v o i mau kh a c nh a u.

➤ N u t LIST/FLOF (E0) du ng ñe chuy e n qua la i gi o a che i ño i LIST va i FLOF.

2 Nh a n n u t mau t o ng o ng v o i tra ng se i ñöôc thay the i

3 Nh a p va o so i tra ng m o i ba ng ca i nh a n ca i so i

4 La p la i ca c bo o c 2 va i 3 khi löu m o i tra ng, m o i la n du ng m o i n u t mau kh a c nh a u.

5 Nh a n n u t E0 (store) co ñe n khi kho i t o ng o ng nh a p nh a y.

## Khắc phục sự cố khi liên hệ với Nhân viên bảo hành

**Trước khi liên hệ với bộ phận hậu mãi của Samsung, cần thực hiện các kiểm tra đơn giản sau. Nếu bạn không thể xử lý sự cố theo các bước dưới đây, hãy ghi lại model và số seri của TV và liên hệ với Nhà phân phối tại nhà phòng.**

Không có hình/tiếng	<ul style="list-style-type: none"> <li>◆ Kiểm tra xem dây nối hai đầu cắm vào ổ cắm của.</li> <li>◆ Kiểm tra xem bản nhả nút <b>Power</b> (⏻) của.</li> <li>◆ Kiểm tra việc cài đặt nguồn phân phối của.</li> <li>◆ Kiểm tra âm lượng.</li> </ul>
Có hình nhưng không có tiếng	<ul style="list-style-type: none"> <li>◆ Kiểm tra âm lượng.</li> <li>◆ Kiểm tra xem có nút <b>MUTE</b> trên bộ điều khiển từ xa không.</li> </ul>
Không có hình hay chỉ có hình nền trắng	<ul style="list-style-type: none"> <li>◆ Chỉnh lại màu.</li> <li>◆ Kiểm tra việc chọn chế độ sóng của.</li> </ul>
Nhiều hình/tiếng	<ul style="list-style-type: none"> <li>◆ Kiểm tra có thiết bị nào khác gây nhiễu cho TV không. Nếu có, di chuyển chúng ra xa.</li> <li>◆ Cắm TV vào một ổ cắm khác.</li> </ul>
Hình ảnh bị nhòe hoặc bị hạt, âm thanh mờ mờ	<ul style="list-style-type: none"> <li>◆ Kiểm tra hướng, vị trí và kết nối anten.</li> <li>◆ Hiện tượng nhiễu này thường xảy ra khi dùng anten trong nhà.</li> </ul>
Bộ điều khiển từ xa bị trục trặc	<ul style="list-style-type: none"> <li>◆ Thay pin bộ điều khiển từ xa.</li> <li>◆ Lau sạch kính của bộ điều khiển từ xa (khu vực thu phát sóng).</li> <li>◆ Kiểm tra các nút của pin.</li> </ul>
Xuất hiện thông báo "Check Signal Cable" (Kiểm tra cáp tín hiệu).	<ul style="list-style-type: none"> <li>◆ Kiểm tra xem cáp tín hiệu có kết nối tốt với PC hoặc các nguồn video của.</li> <li>◆ Kiểm tra xem PC và các thiết bị video nguồn hai đầu của.</li> </ul>
Chỉ có PC, xuất hiện thông báo "Not Supported Mode"	<ul style="list-style-type: none"> <li>◆ Kiểm tra nội dung giải mã và tần số của bộ điều chỉnh video.</li> <li>◆ So sánh thông tin này với dữ liệu trong Display Modes Timing Chart (Số hiển thị giờ các kiểu hiển thị).</li> </ul>
Chỉ có PC, xuất hiện các sọc ngang hoặc dọc gây nhay, trôi hình.	<ul style="list-style-type: none"> <li>◆ Điều chỉnh chế độ Coarse và Fine.</li> </ul>
Chỉ có PC, màn hình ở trạng thái nền và liên tục bị mờ hoặc nhấp nháy mỗi 0,5 giây hoặc 1 giây	<ul style="list-style-type: none"> <li>◆ TV đang sử dụng hệ thống quản lý nguồn của nó.</li> <li>◆ Di chuyển con chuột máy tính hoặc ấn một phím trên bàn phím.</li> </ul>
Chỉ có PC, hình ảnh không ổn định và có thể bị rung.	<ul style="list-style-type: none"> <li>◆ Kiểm tra xem nội dung giải mã màn hình và tần số của máy tính hoặc card màn hình có tương thích với chế độ hiển thị của TV không. Trên PC kiểm tra: Control Panel, Display, Settings.</li> <li>◆ Nếu cần, đặt lại, dùng chương trình tiện ích của máy tính để thay đổi cài đặt màn hình.</li> </ul> <p>➤ TV của bạn hỗ trợ các chế độ quét ngang và dọc trong phạm vi tần số sau:  <b>Tần số quét ngang:</b> 30 ~ 85 kHz  <b>Tần số quét dọc:</b> 55 ~ 85 Hz</p>
Chỉ có PC, hình ảnh không cân đối giữa.	<ul style="list-style-type: none"> <li>◆ Chỉnh vị trí quét ngang/dọc.</li> </ul>
Bàn phím liên tục khiến màn hình.	<ul style="list-style-type: none"> <li>◆ Tải và trình diễn khi truy cập trang Web:  <a href="http://www.samsungusa.com/monitor">http://www.samsungusa.com/monitor</a>  <a href="http://www.samsung-monitor.com">http://www.samsung-monitor.com</a> </li> </ul>

## Các thông số kỹ thuật và môi trường

Kiểu máy	SyncMaster 211MP	SyncMaster 241MP
<b>Panel</b>		
Kích thước	21,3" theo chiều chéo	24,06" theo chiều chéo
Kích thước hiển thị	432 (Ngang) X 324 (Dọc) mm	518,4 (Ngang) X 324 (Dọc) mm
Loại	màn hình a-si TFT ma trận hoạt động	
Diện tích hiển thị	0,27 (Ngang) X 0,27 (Dọc) mm	0,27 (Ngang) X 0,27 (Dọc) mm
Góc nhìn	80/80/80/80 (L/R/T/B)	
<b>Tần số</b>		
Quét ngang	30 ~ 85 kHz	
Quét dọc	55 ~ 85 Hz	
Màu hiển thị	16.777.216 màu	
<b>Nội phân giải</b>		
Chiều phân giải	1600 x 1200 @ 60 Hz	1920 x 1200 @ 60 Hz
<b>Tín hiệu vào</b>		
Đồng bộ	H/V Riêng lẻ TTL, P. hoặc N. H/V Tổng hợp, TTL, P. hoặc N. Sync-on-green 0,3 Vp-p, N. 0,7 Vp-p @ 75 ohm	
Tín hiệu hình		
<b>TV/Video</b>		
Hệ màu	PAL, SECAM, NTSC4,43	
Hệ tiếng	B/G, D/K, I, L, L'	
Dạng hình ảnh	CVBS, S-VHS	
<b>Scart</b>		
Nối vào/ra hình	1,0 Vp-p @ 75 ohm	
Nối vào RGB	0,7 Vp-p @ 75 ohm	
Nối vào/ra tiếng	500mVrms	
<b>Hệ màu</b>		
	PAL	
<b>Nguồn điện</b>		
Ngoại vào	100 - 240 V (50Hz / 60Hz)	
Ngoại ra	DC 14V/8A	
<b>Công suất tiêu thụ</b>		
Tối đa	110 W	120 W
Tiết kiệm	< 8 W	
<b>Kích thước (Rộng x Dài x Cao)</b>		
Dạng màn hình	531,5 x 67,5 x 422	618 x 67,5 x 422
Cổng	578,7 x 218,2 x 472	665,2 x 218,2 x 472
<b>Điều kiện môi trường</b>		
Nhiệt độ làm việc	50 °F đến 104 °F (10 °C to 40 °C)	
Nhiệt độ lưu trữ	10% đến 80%	
Nhiệt độ môi trường	- 13 °F đến 113 °F (-25 °C to 45 °C)	
Nhiệt độ lưu trữ	5% đến 95%	
<b>Các thành phần âm thanh</b>		
Nối vào tiếng	RCA Jack (L, R), 0,5Vrms (-9dB)	
Nối vào tiếng (PC)	3,5Stereo Jack, 0,5Vrms (-9dB)	
Nối ra tiếng	RCA Jack (L, R), 0,5Vrms (-9dB)	
Nối ra loa	Nối ra tối đa 5W (3,5Stereo Jack, 2)	
Nối ra headphone	Nối ra tối đa 10W (3,5Stereo Jack, 32)	
Tần số	RF: 80Hz ~ 15kHz (at- 3dB)	
Phản hồi	A/V: 80Hz ~ 20kHz (at- 3dB)	



---

## – AFTER SALES SERVICE

---

- Do not hesitate to contact your retailer or service agent if a change in the performance of your product indicates that a faulty condition may be present.



BN68-00169F-00